

AQUAPHOR
PROFESSIONAL

APRO 3000/4000/6000 LPH

WATER PURIFICATION SYSTEM



TABLE OF CONTENTS

Table of contents..... 3

1. GENERAL INFORMATION 7

 1.1 Safety..... 7

2. SYSTEM OVERVIEW 8

 Table of system equipment 10

 Table of optional equipment 11

3. ELECTRIC CIRCUITS 12

 3.2 Electric circuit schemes 13

4. CONTROL PANEL 24

 4.1 General information 24

 4.2 Elements on the control panel 24

5. TECHNICAL DATA DESCRIPTION..... 25

 5.1 Requirements on site 25

 5.1.1 Water quality 25

 5.1.2 Installation rooms 25

 5.1.3 Reverse osmosis data 26

6. INSTALLATION 27

 6.1 Safety Pointers 27

 6.2 General pointers..... 28

 6.3 Water connection..... 28

 Installation 28

7. CONFIGURATION..... 30

 7.1 Starting 30

 7.1.1 Connection..... 30

 7.2 Configuration via controller keyboard 31

 Starting window 31

 7.3 System Start-Up 32

 7.4 System Shut-Down 33

 7.5 System Run..... 34

 7.6 Equipment setup 35

 7.6.1 Example of software setup 35

 Program 01: FEED PUMP (P-03)..... 36

 Program 02: PRETREATMENT (PTS-01)..... 36

 Program 03: FLUSH VALVE * 36

 Program 04: PERMEATE VALVE NC (XV-02) 37

 Program 05: SUPPLY PUMP (P-04)..... 37

 Program 06: PERMEATE FLOW TRANSMITTER (FT-01)..... 37

Program 07: FEED FLOW TRANSMITTER (FT-02)	37
Program 08: HIGH PRESSURE SWITCH (HPS-01)	38
Program 09: PERMEATE FLUSH (XV-05).....	38
Program 10: PULSE DOSING *	38
Program 11: DOSING LEVEL SW. (LLS-02)	38
Program 12: HIGH FREQUENCY RO.....	39
Program 13: HF VALVE NO *	39
Program 14: DOUBLE PUMP RO.....	39
Program 15: PERMEATE CONDUCTIVITY (ECT-01).....	39
Program 16: RAW WATER CONDUCTIVITY (ECT-02).....	40
Program 17: FEED LOW PRESSURE TRANSMITTER (LPT-01)	40
Program 18: FEED PRES. TRANSMITTER 4-20 mA (LPT-01) *OPTIONAL	40
Program 19: INLET LOW PRES. TRANSMITTER.....	40
Program 20: INLET PRES. TRANSMITTER 4-20MA (LPT-02) *OPTIONAL.....	41
Program 21: RO HIGH PRESSURE TRANSMITTER (HPT-01)	41
Program 22: RO HIGH PRESSURE TRANSMITTER RANGE 0-40	41
Program 23: RO PRESSURE TRANSMITTER 4-20MA (HPT-01)	41
Program 24: PERMEATE PRESSURE TRANSMITTER (PT-01) *OPTIONAL	42
Program 25: PERMEATE PRESSURE TRANSMITTER 4-20Ma (PT-01)	42
7.7 Setups.....	43
Setup 01: START-UP FLUSH.....	43
Setup 02: SHUT-DOWN FLUSH.....	43
Setup 03: STAND-BY FLUSH	43
Setup 04: HIGH CONDUCTIVITY PERMEATE WATER ALARM	43
Setup 05: HIGH CONDUCTIVITY FEED WATER ALARM.....	44
Setup 06: LOW PRESS. DELAY	44
Setup 07: DOSING PULSE/MIN *	44
Setup 08: PERMEATE FLOW 'k'	44
Setup 09: FEED FLOW 'K'	45
Setup 10: FLUSH PULSE/MIN	45
Setup 11: FLUSH PULSE DURATION	45
Setup 12: PERIODIC FLUSH/H	45
Recovery Setups (SetupS 10-13).....	46
Setup 13: PERIODIC FLUSH DURATION	46
Setup 14: FULL TANK DELAY	47
Setup 15: PERMEATE LOW FLOW	47
Setup 16: CONCENTRATE LOW FLOW	47
Setup 17: LOW FEED PRESSURE.....	47

Setup 18: LOW INLET PRESSURE	48
Setup 19: HIGH RO PUMP PRESSURE ALARM	48
Setup 20: SYSTEM STOP PERMEATE TANK PRESSURE ALARM	48
Setup 21: SYSTEM START PERMEATE TANK PRESSURE	48
Setup 22: CARTRIDGE FILTER PRESSURE DROP ALARM	49
Setup 23: CARTRIDGE FILTER RESOURCE	49
Setup 24: SYSTEM ID NUMBER	49
Setup 25: YEAR	49
Setup 26: DATE/MONTH	50
Setup 27: TIME	50
8. ALARMS AND TROUBLESHOOTING	51
8.1 ALARM-01: Low level in the RAW water tank	51
8.2 ALARM-02: Pretreatment system error	51
8.3 ALARM-03: Antiscalant tank low level * Not required	52
8.4 ALARM-04: Raw water low pressure	52
8.5 ALARM-05: Low inlet pressure	52
8.6 ALARM-06: High inlet pressure to RO membrane unit	53
8.7 ALARM-07: RO pump overload	53
8.8 ALARM-08: High electrical conductivity of permeate	53
8.9 ALARM-09: Minimum permeate flow	54
8.10 ALARM-10: Minimum concentrate flow	54
8.11 ALARM-11: Low permeate level	54
8.12 ALARM-12: High feed conductivity	55
8.14 ALARM-14: Feedpressure sensor	55
8.15 ALARM-15: Inlet pressure sensor	55
8.16 ALARM-16: RO pressure sensor	55
8.17 ALARM-17: Permeate pressure sensor	56
8.18 Warnings	56
8.19 Equipment testing	58
9. RO ANDROID APP (APRO APP)	59
9.1 Setting Up	59
9.2 System Configuration	60
9.3 Operating Mode Functionality	60
9.4 GSM Module Settings Window	62
9.5 GSM Module Status	63
9.6 Additional Information	63
10. MAINTENANCE	64
10.1 Dosing Pump Degassing	64

10.2 Replacing The Membrane Module.....	65
10.2.1 Preparing the pressure vessels.....	65
10.2.2 Membrane elements loading.....	66
10.3 Replacing The Filter Cartridge	67
10.3.1 Viking cartridge (B520-13)	67
10.4 Yearly Check And Maintenance.....	68
10.4.1 Cables and Cable Connection	68
10.4.2 Automatic Concentrate Valve Flush Opening	69
10.5 Membrane Functioning Tips	70
10.5.1 Low Flow	70
10.5.2 Low Flow and High Solute Passage.....	70
10.5.3 Low Flow and low Solute Passage	71
10.5.4 High Solute Passage.....	72
10.5.5 Quick guide (table)	72
10.6 Membrane Cleaning (CIP)	73
10.7 Calibration.....	76
uS/cm to ppm conversion table	79
10.8 Preservation of RO and NF systems	80
11. SYSTEM INFORMATION COLLECTION VIA MODBUS.....	81
11.1 Modbus communication port setpoints.....	81
11.2 Viewing/Setting Modbus setpoints.....	81
11.3 Network Communication Protocol.....	81
11.4 RO Settings (Read Only)	81
11.4 Control Word.....	82
11.5 Modbus Registers.....	83
Status words	83
12. RULES OF STORAGE AND TRANSPORTATION.....	86
12.1 Shipping.....	86
13. SERVICE AND WARRANTY	87
Exclusions and Limitations.....	87
Additional Materials.....	88
System Equipment list	90
Remarks	91
APRO 3000/4000/6000 lph Factory Setup Settings.....	92
APRO 3000/4000/6000-LPH - Factory configuration settings	93

1. GENERAL INFORMATION

1.1 SAFETY

Content

This manual contains the most important pointers regarding a safe installation, commissioning, use, check, and maintenance of the unit and its equipment.

Target group

This manual has been written with the intention to be read, understood, and completely considered by everyone responsible for the activation, monitoring, care, check, and maintenance.

Symbols

The following symbols are used in this manual:

**DANGER**

Denotes a direct threat of danger. Not observing this pointer may be life-threatening or lead to serious injuries.

**WARNING**

Denotes a possibly dangerous situation. Not observing this pointer may be life threatening or lead to serious injuries.

**CAUTION**

Denotes a possibly dangerous situation. Not observing this pointer can cause minor injuries.

**ATTENTION**



Denotes a possibly dangerous situation. Not observing this pointer can cause material damage.

**INFORMATION**




Denotes application pointers and other useful information.

2. SYSTEM OVERVIEW

2.1 APRO 3000/4000/6000 LPH SYSTEM DIMENSIONS

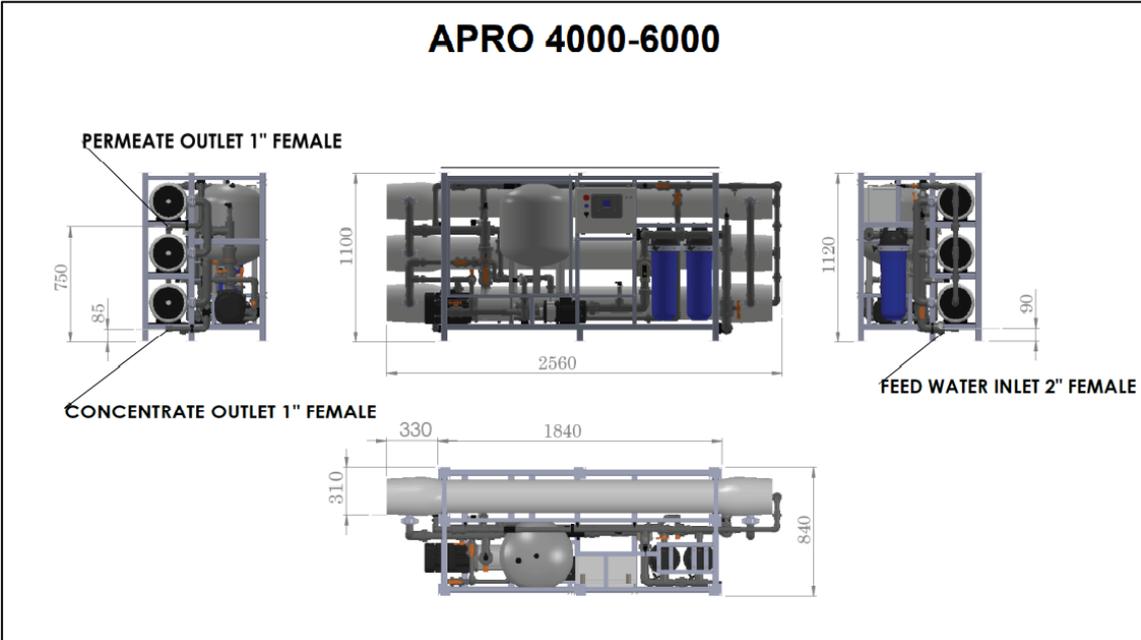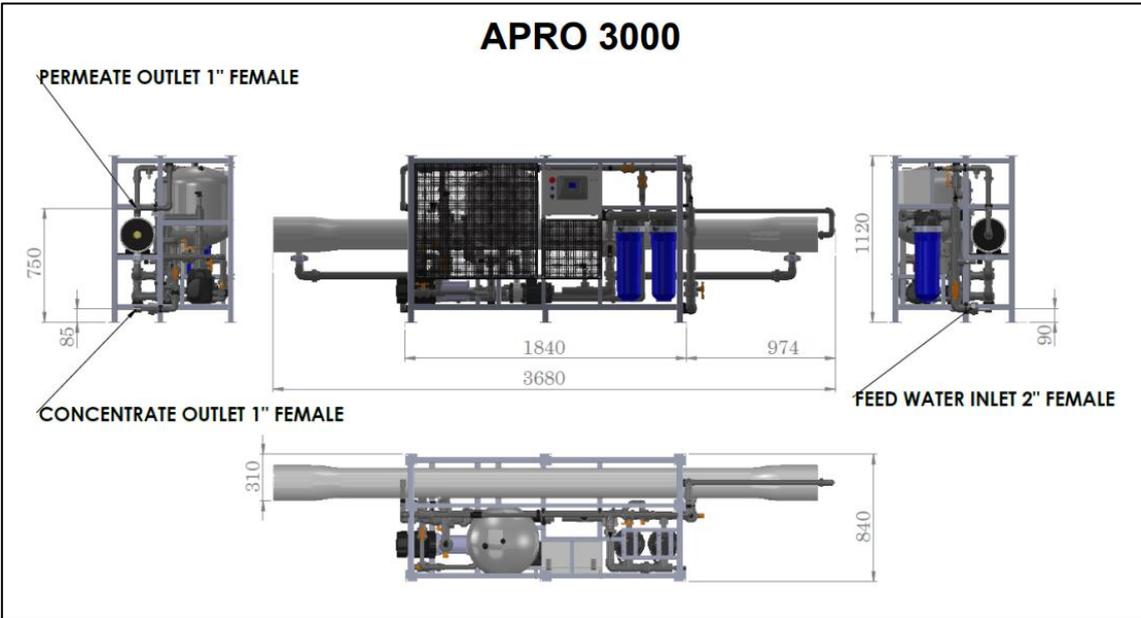

2.2 APRO 4000/6000 LPH SYSTEM EQUIPMENT

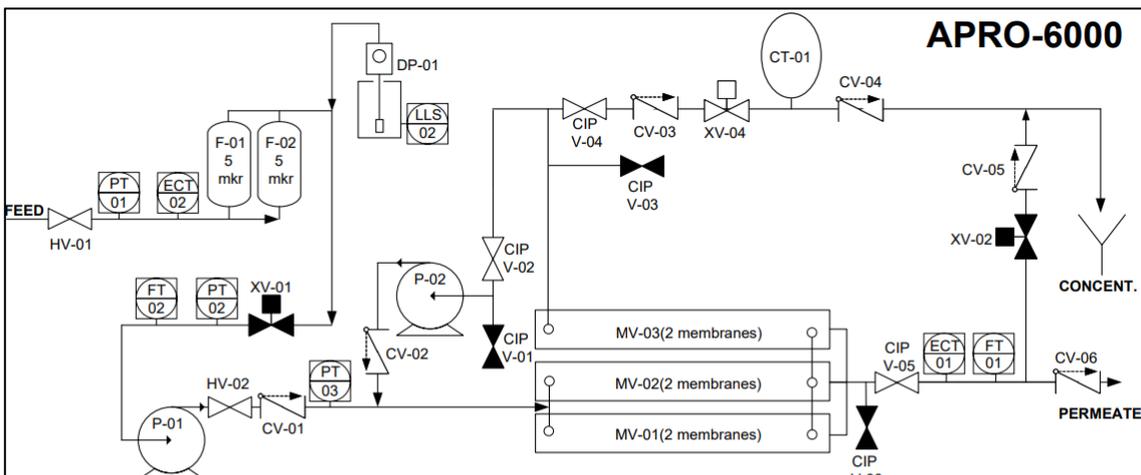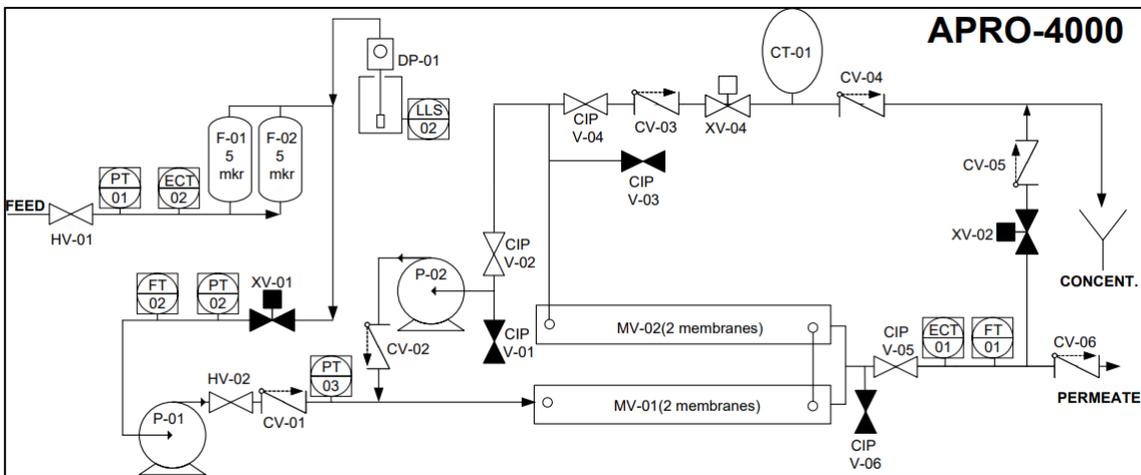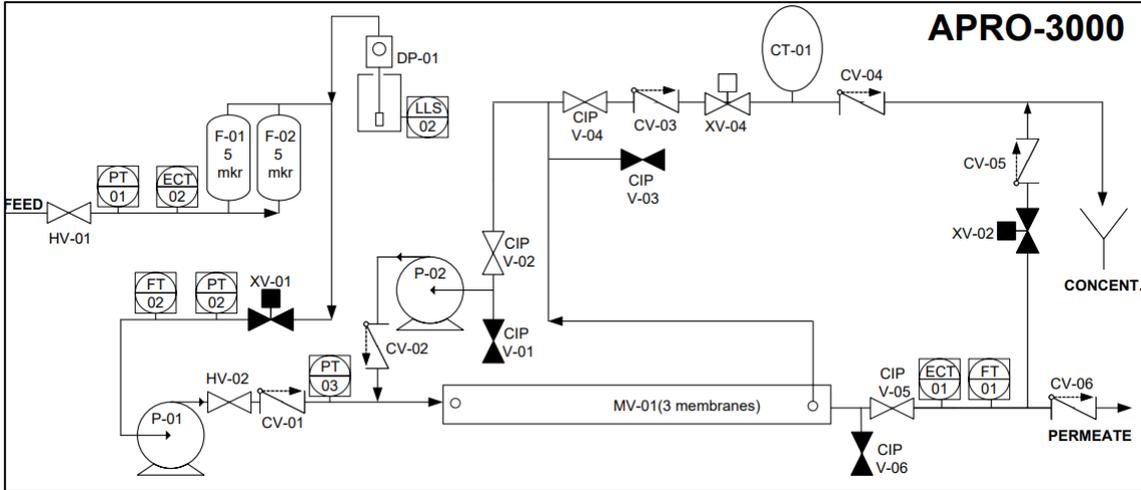


	Flow trans.		Check valve		Actuated valve(NO)		Level Switch
	Pressure trans.		Ball valve (NO)		Actuated valve(NC)		Pump
	Conductiv.trans.		Ball valve (NC)		Pressure tank		Dosing Pump

TABLE OF SYSTEM EQUIPMENT

Tag	Name	Function
HV-01	Ball Valve	Ball Valve.
PT-01	Pressure Transmitter	Feed pressure transmitter.
ECT-02	Feed Conductivity sensor	Feed Conductivity probe.
F-01	Cartridge Filter Housing	Feed water filtration cartridge (5 mkr).
F-02	Cartridge Filter Housing	Feed water filtration cartridge (5 mkr).
DP-01	Dosing Pump	Dosing pump antiscalant. Doses feed water antiscalant.
LLS-02	Low level switch	Antiscalant low level switch. Protects DP-01 from dry running.
XV-01	Feed Valve	The valve for supplying feed water to the reverse osmosis system.
PT-02	Pressure Transmitter	Reverse osmosis feed pressure sensor.
FT-02	Flow Transmitter	Feed flow transmitter. Inlet water flow sensor.
P-01	Pressure Pump	Reverse osmosis pump. Builds up pressure and supply water to reverse osmosis membranes.
HV-02	Ball Valve	Ball valve.
CV-01	Check Valve	
PT-03	Pressure Transmitter	Reverse osmosis pump pressure sensor.
CV-02	Check Valve	
P-02	Recirculation Pump	Concentrate recirculation pump. Serves to recirculate concentrate through the osmotic membranes.
CIP V-01	CIP Valve	Ball valve
CIP V-02	CIP Valve	Ball valve
CIP V-03	CIP Valve	Ball valve
CIP V-04	CIP Valve	Ball valve
CV-03	Check Valve	Concentrate check valve.
XV-04	Concentrate Valve	Concentrate valve.
CT-01	Concentrate Tank	Serves for the accumulation of concentrate.
CV-04	Check Valve	Check and pack pressure valve.
CV-05	Check Valve	Permeate drainage check valve.
XV-02	Drainage Valve	First permeate drainage.
MV-01/03	Membrane Housing	2 membranes each.
CIP V-05	CIP Valve	Ball valve
CIP V-06	CIP Valve	Ball valve
ECT-01	Permeate conductivity sensor	Reverse osmosis permeate conductivity probe.
FT-01	Permeate flow sensor	Permeate flow transmitter.
CV-06	Check Valve	Permeate supply check valve.
XV-05	Flushing valve	Stand-by permeate membrane flushing valve.
HPT-01	High pressure transmitter	RO high pressure transmitter
LPT-01	Low pressure transmitter	Feed low pressure transmitter

TABLE OF OPTIONAL EQUIPMENT

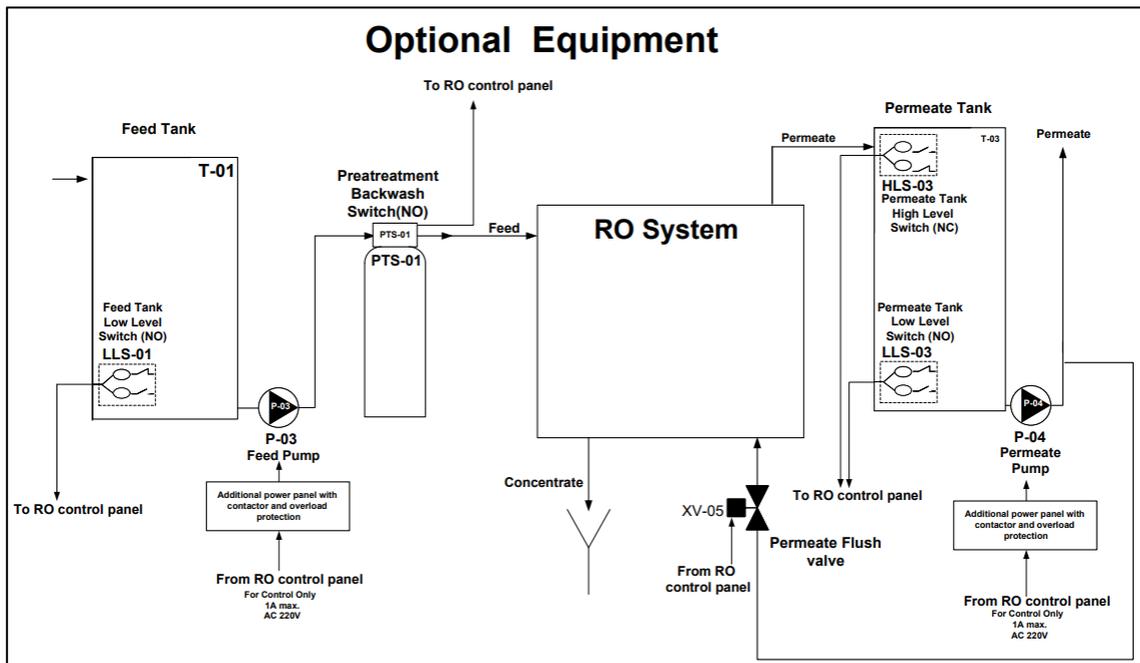

Tag	Name	Function
T-01	Feed tank	Raw water storage tank.
T-03	Permeate tank	Permeate storage tank.
P-03	Feed Pump	Boosts pressure and supply water to reverse osmosis membranes.
P-04	Supply pump	Serves to supply RO permeate to the user.
XV-05	Flushing valve	Stand-by permeate membrane flushing valve.
PTS-01	Pretreatment Backward Switch	Pretreatment backwashing stage indicator.
LLS-01	Low Level Sensor	Protects P-03 from dry running.
LLS-03	Low Level Sensor	Protects P-04 from dry running.
HFS-01/02	High Level float switch	Mechanically blocks water supply when the tank is overfilled.


3. ELECTRIC CIRCUITS

3.1 GENERAL INFORMATION

- All elements of the electrical circuit are assembled and require no additional intervention except for the connection of additional equipment. The unit is equipped with fully automated control. It can supply purified water using the logic controller, water level, and pressure sensors, based on an adjustable algorithm, standardized for the reverse osmosis systems manufactured by Aquaphor.
 - The controller program works as part of the AFE-002-000 electronic complex and controls the reverse osmosis systems of various APRO configurations.
- !** The connection of auxiliary equipment must be carried out by certified specialists with the appropriate knowledge, skills, and experience working on this equipment. The manual setting of additional installation modes is possible only
- with the help of the switchboard and controller.


3.2 ELECTRIC CIRCUIT SCHEMES

TIBOX TJ-TC-3040-1 400x300x210

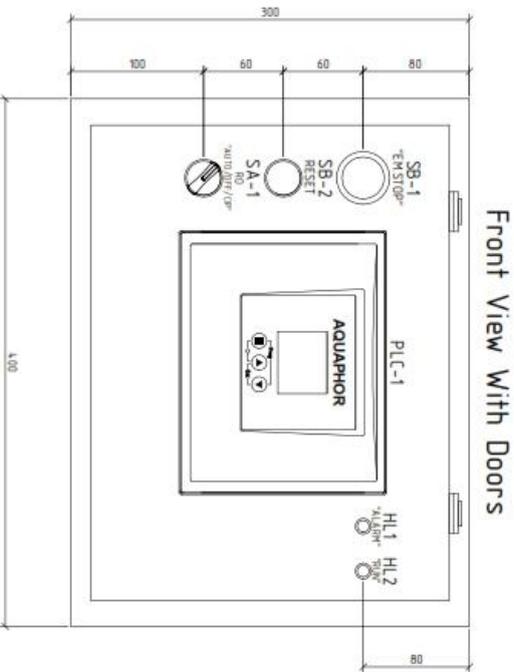


Field Incoming Connections
At This Area


Note: make all incoming field connections with cable glands PG type IP68

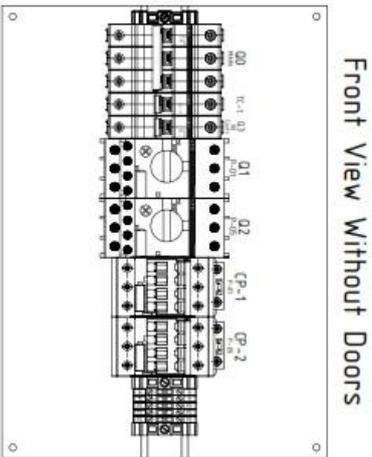


Configuration PLC


CODE	Model	Designation
PLC	CPU AFE-002-000	AQUAPHOR
	Power board AFE-006-100	10 Relay Outputs (active)
	Switching board AFE006-500	2 Conductivity electrodes 1 Analog Input 16 Digital Inputs 4 High-speed Counter Inputs 5 Transistor outputs (pnp) 2 Channels RS485 (modbus)
Expansion Board	AFE-007-000	4 Analog Input
PLC	230 VAC Power Supply	

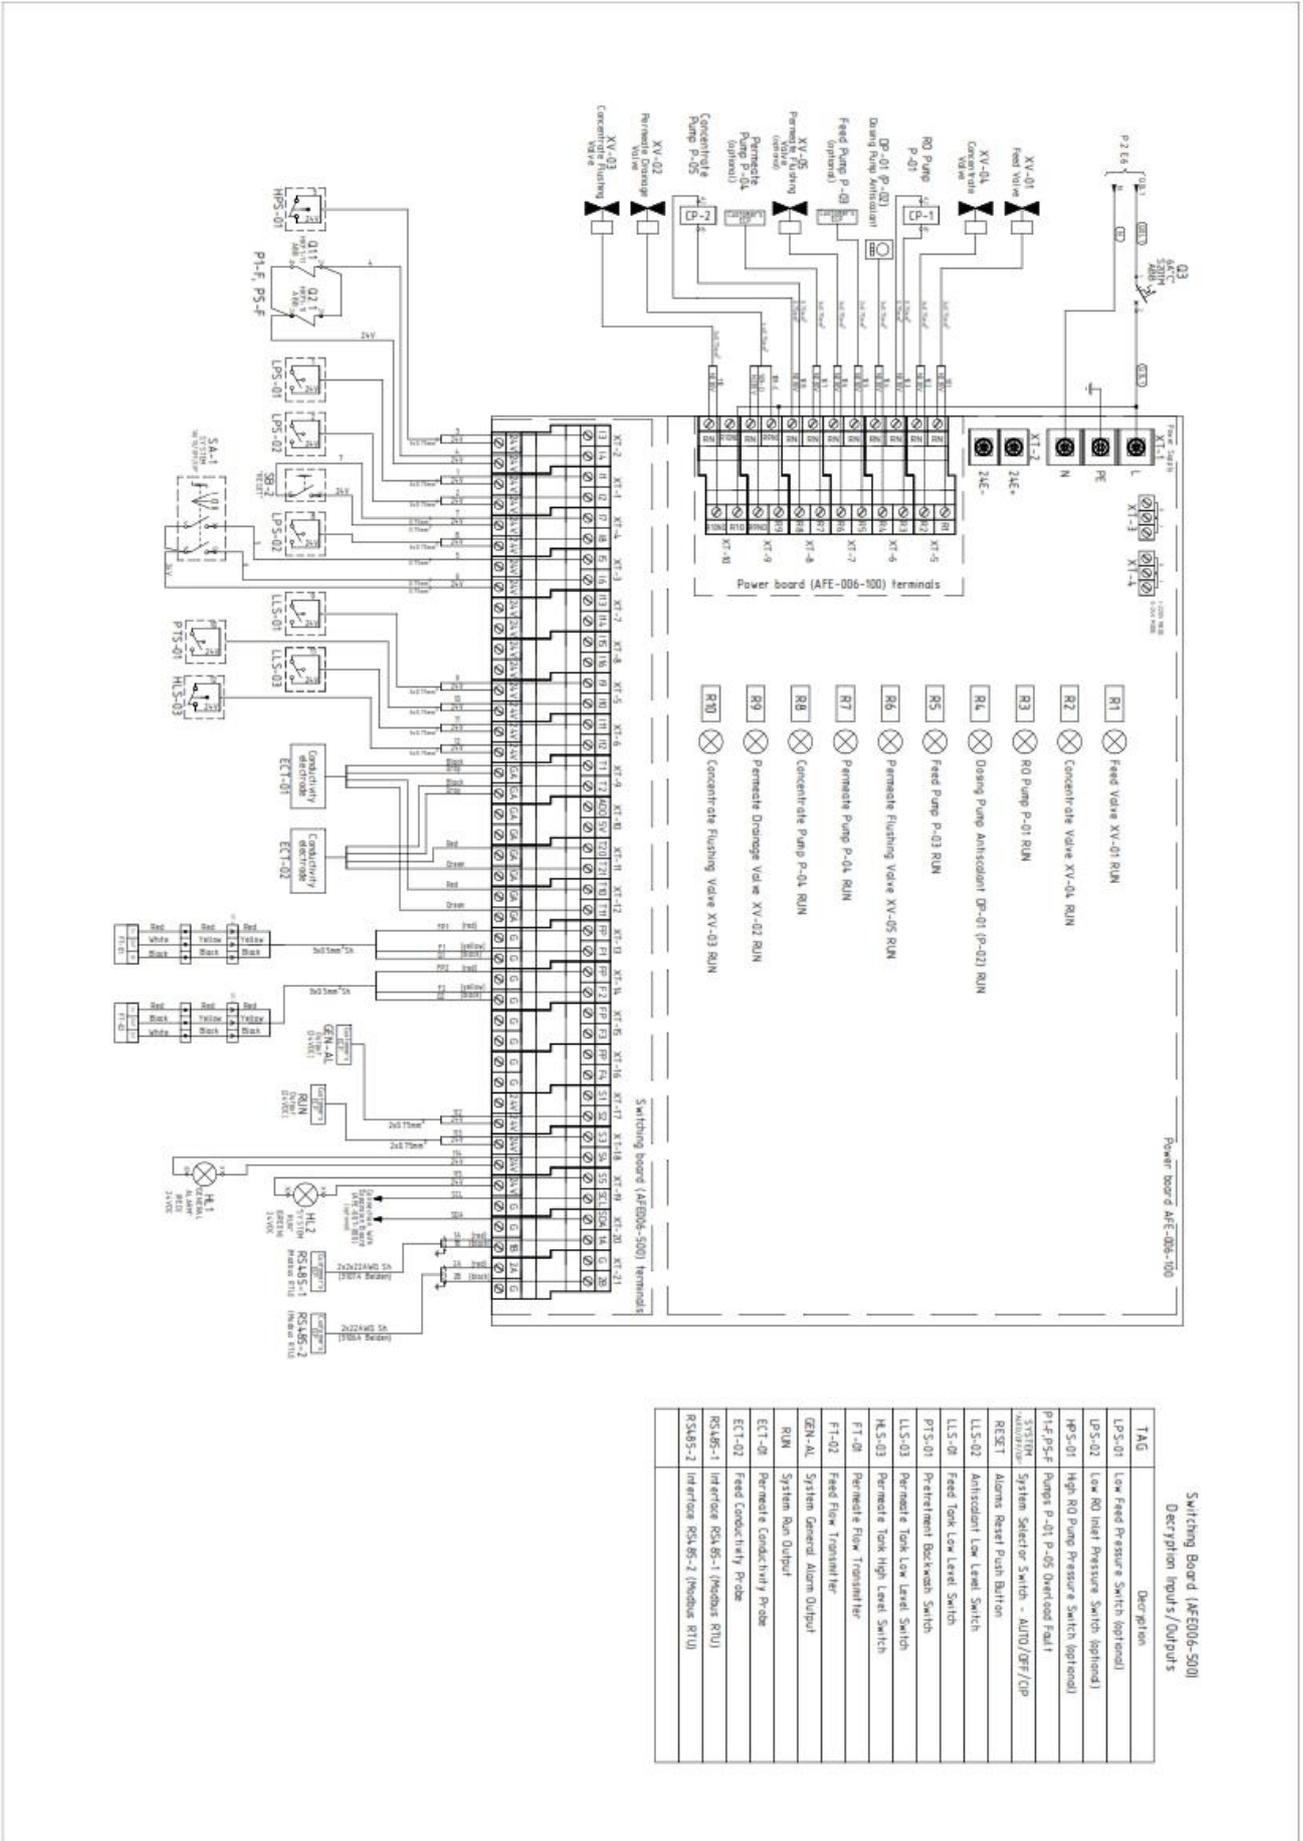


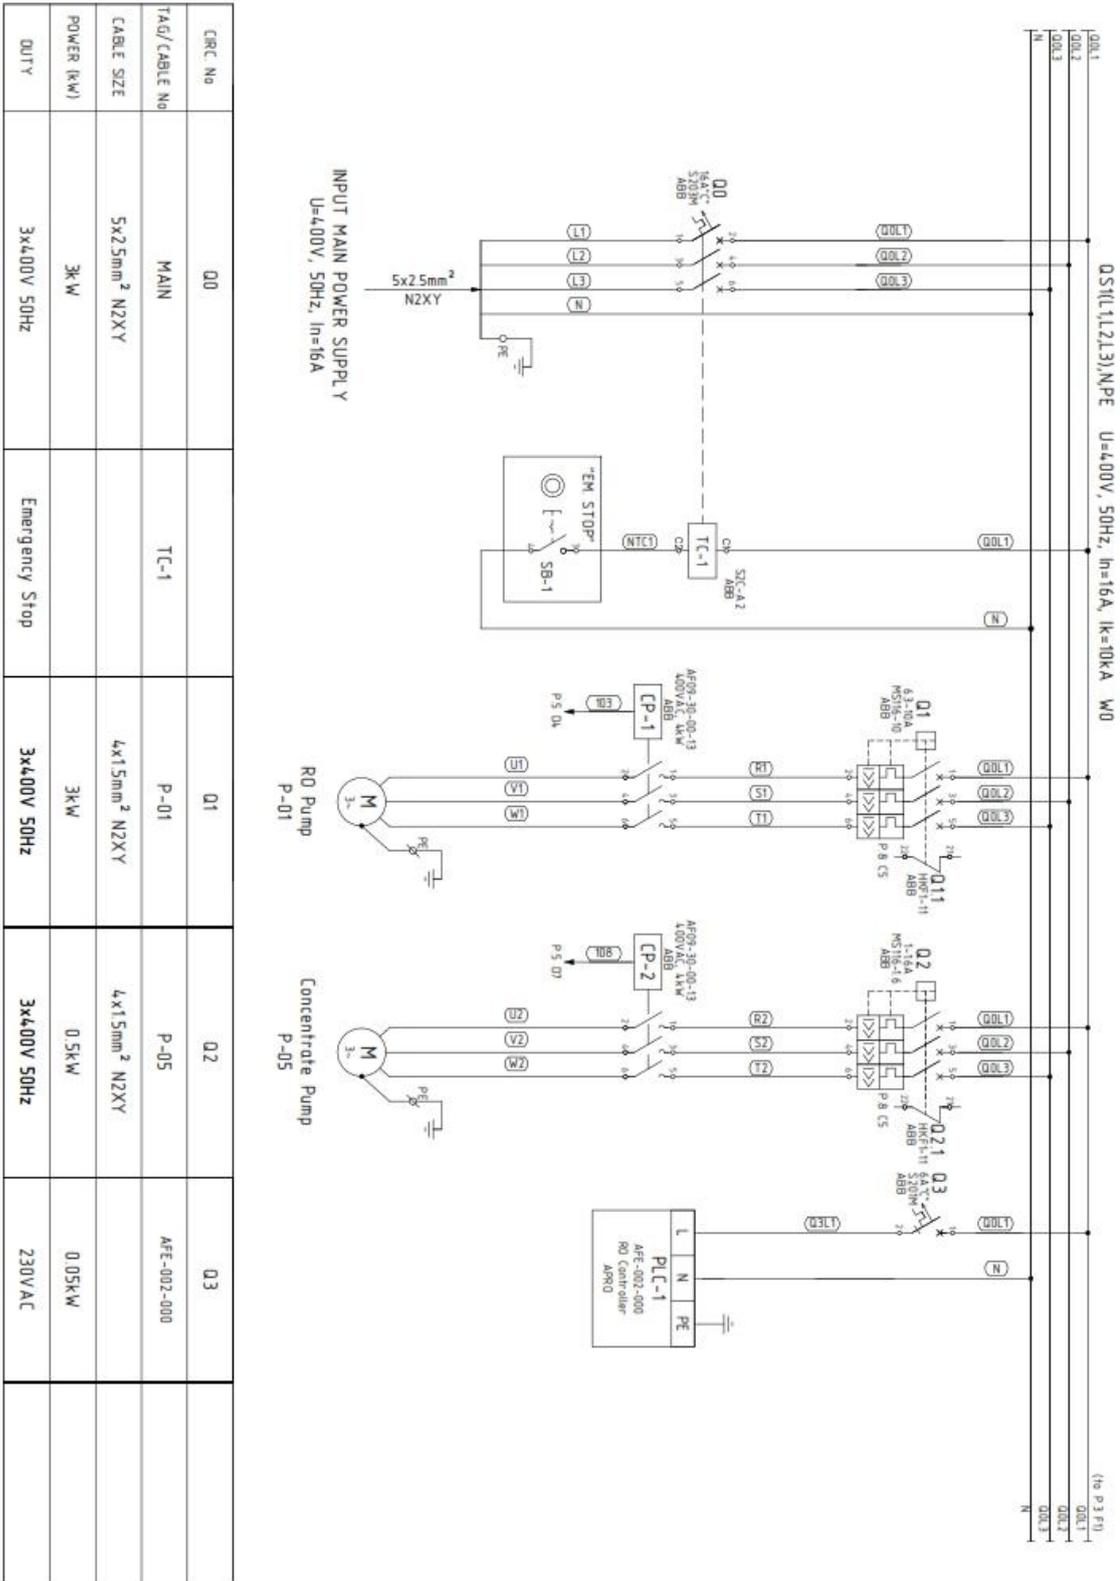

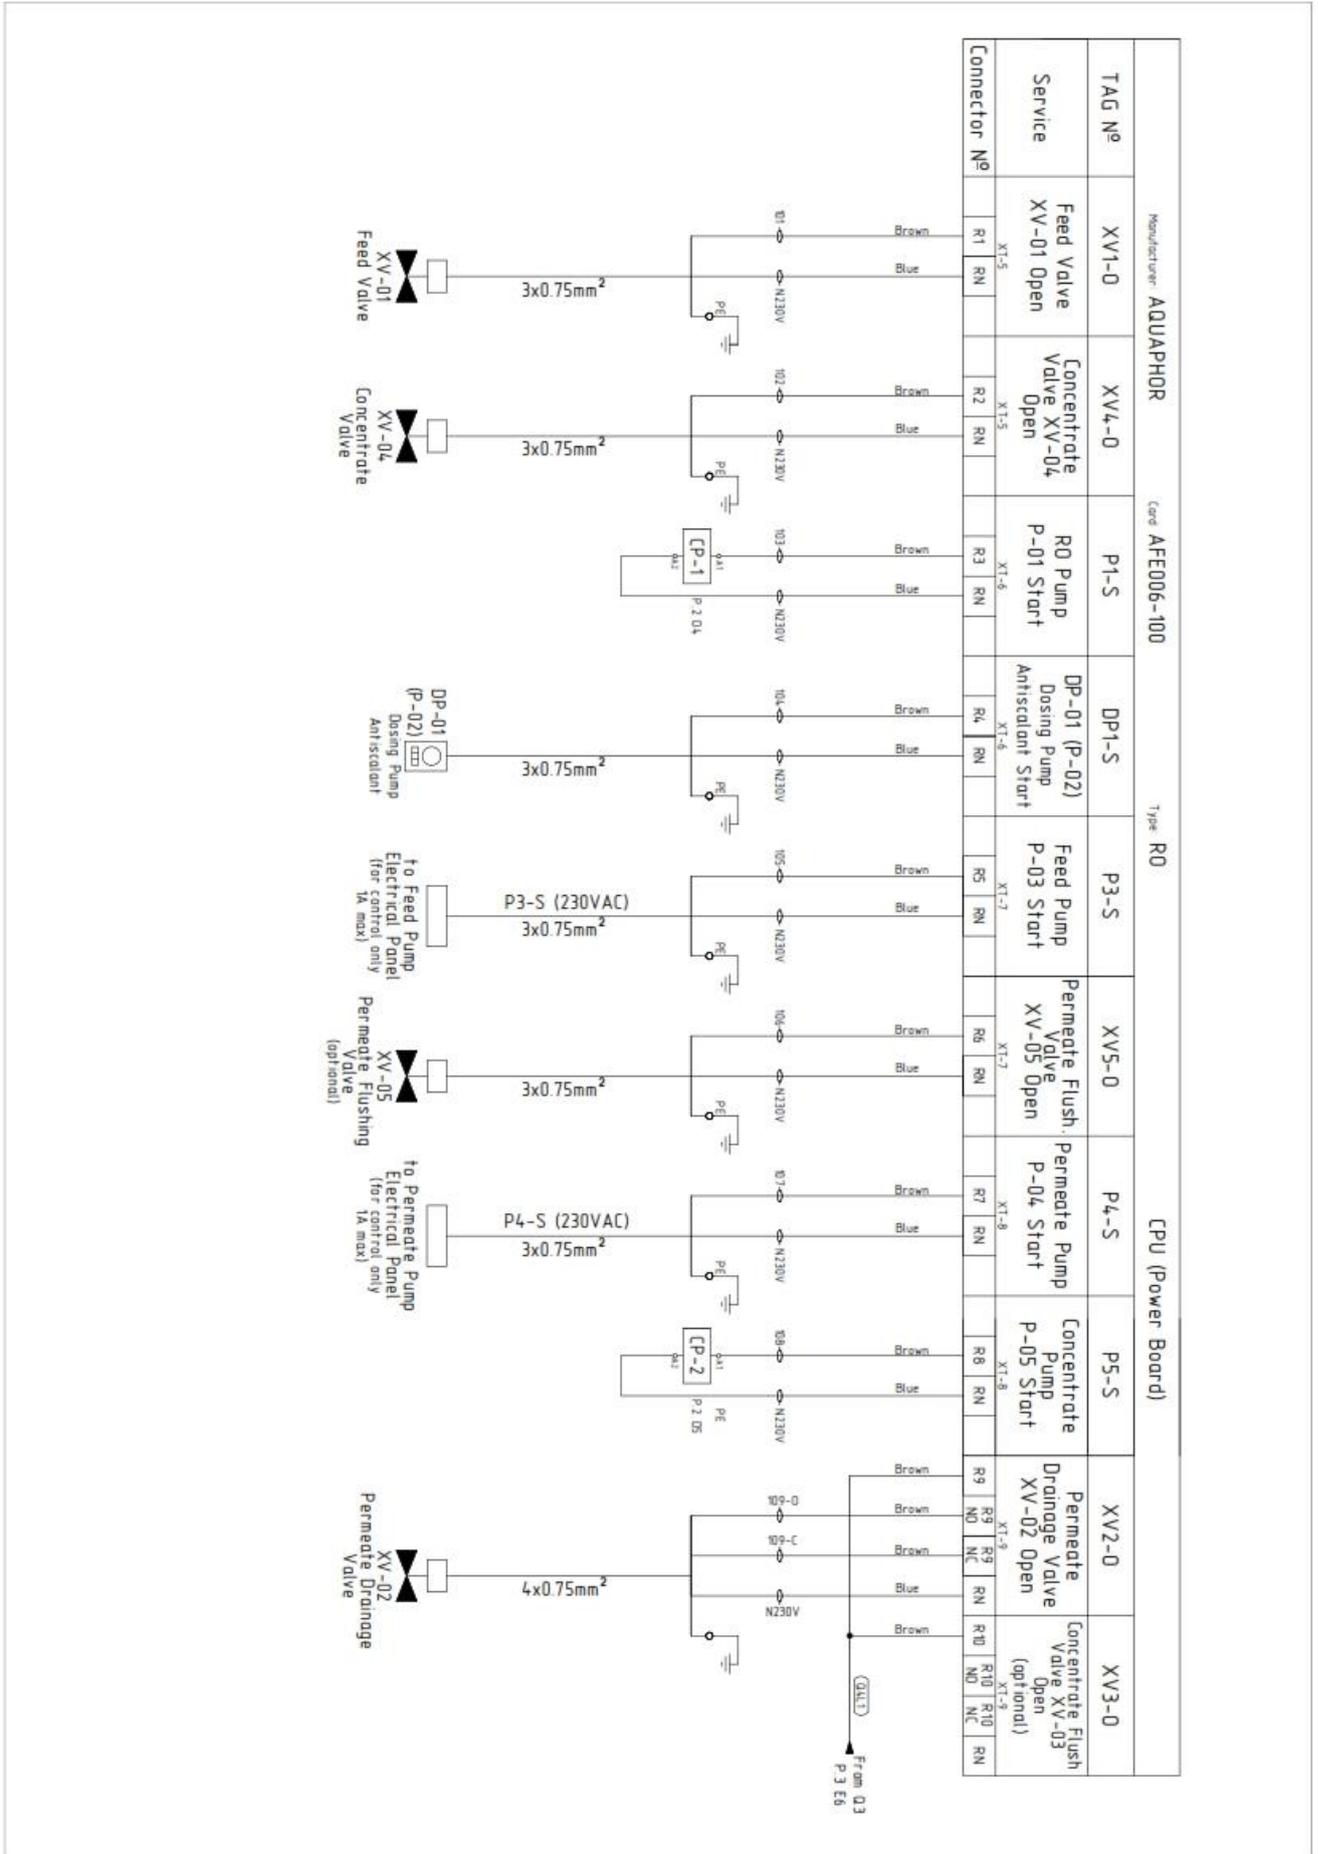



NOTE: In the case of using an analog input board (expansion board AFE-007-000), jumpers must be installed on the digital inputs I1,I2,I3

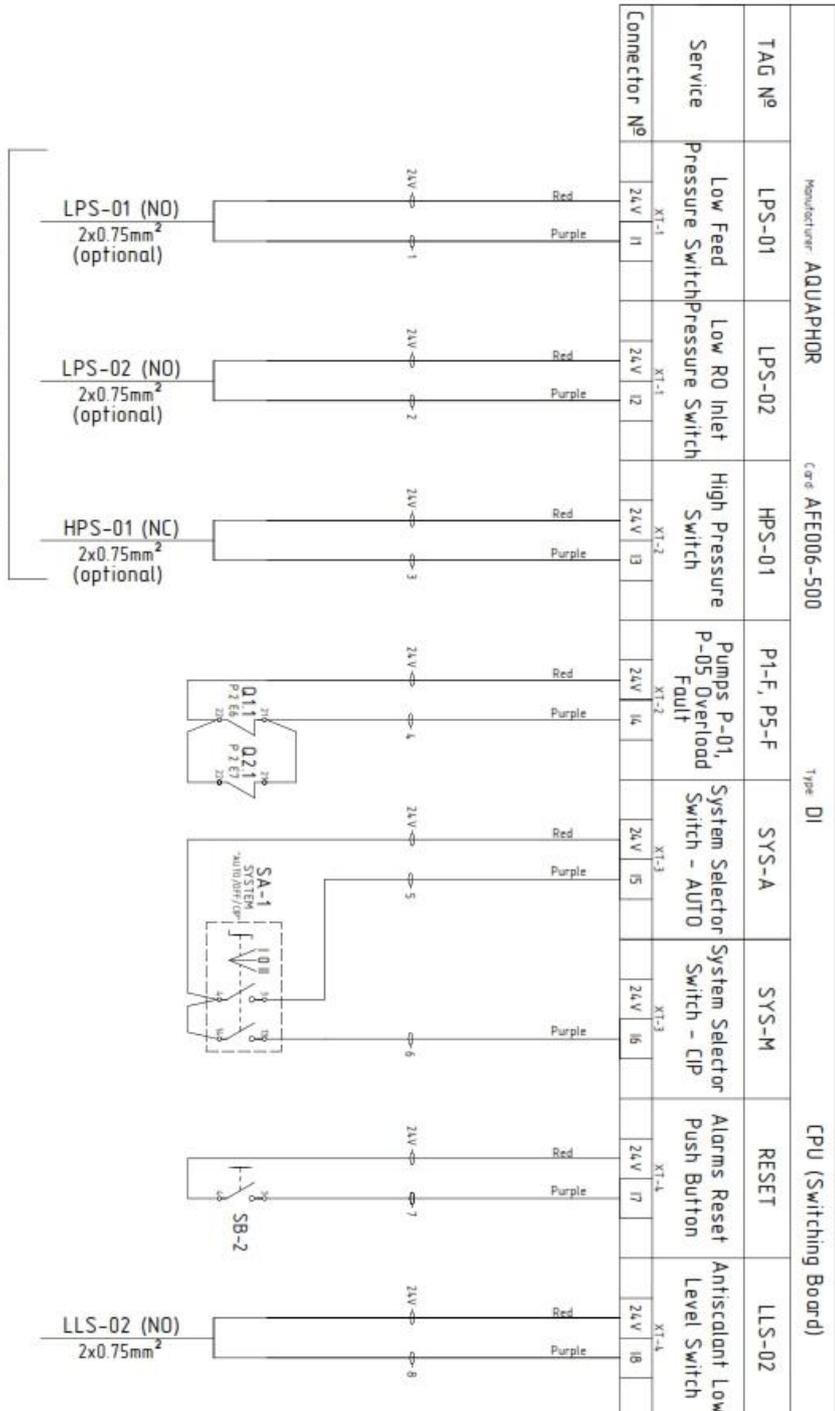


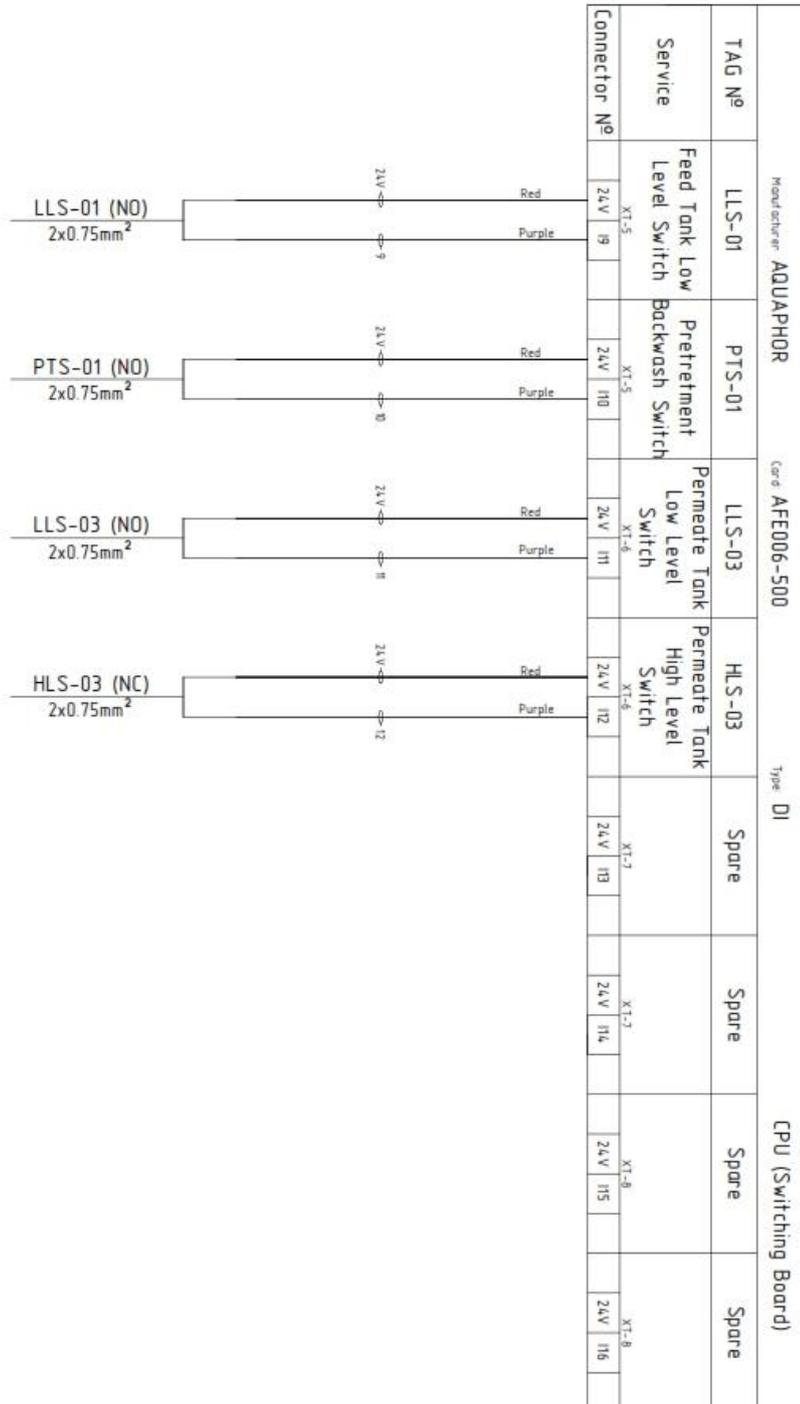


Manufacturer: AQUAPHOR		Code: AFED06-500		Type: HSCI (High-speed Counter Inputs)		CPU (Switching Board)	
TAG N°	FT-01	FT-02	Spare	Spare			
Service	Permeate Flow Transmitter	Feed Flow Transmitter					
Connector N°	XT-8	XT-11	XT-15	XT-16			
	FP F1 G	FP F2 G	FP F3 G	FP F1 G			
	Red	Red		Red			
	Yellow	Yellow		Yellow			
	Black	Black		Black			

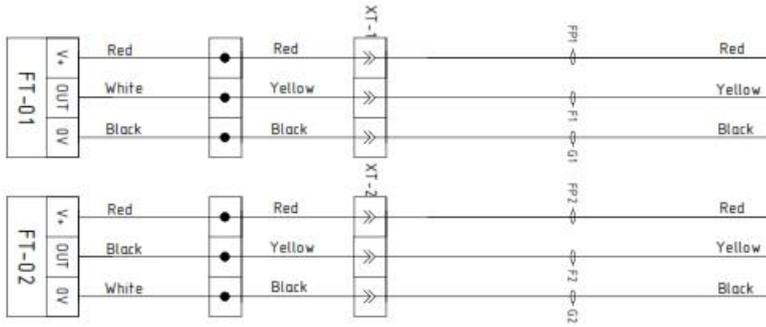

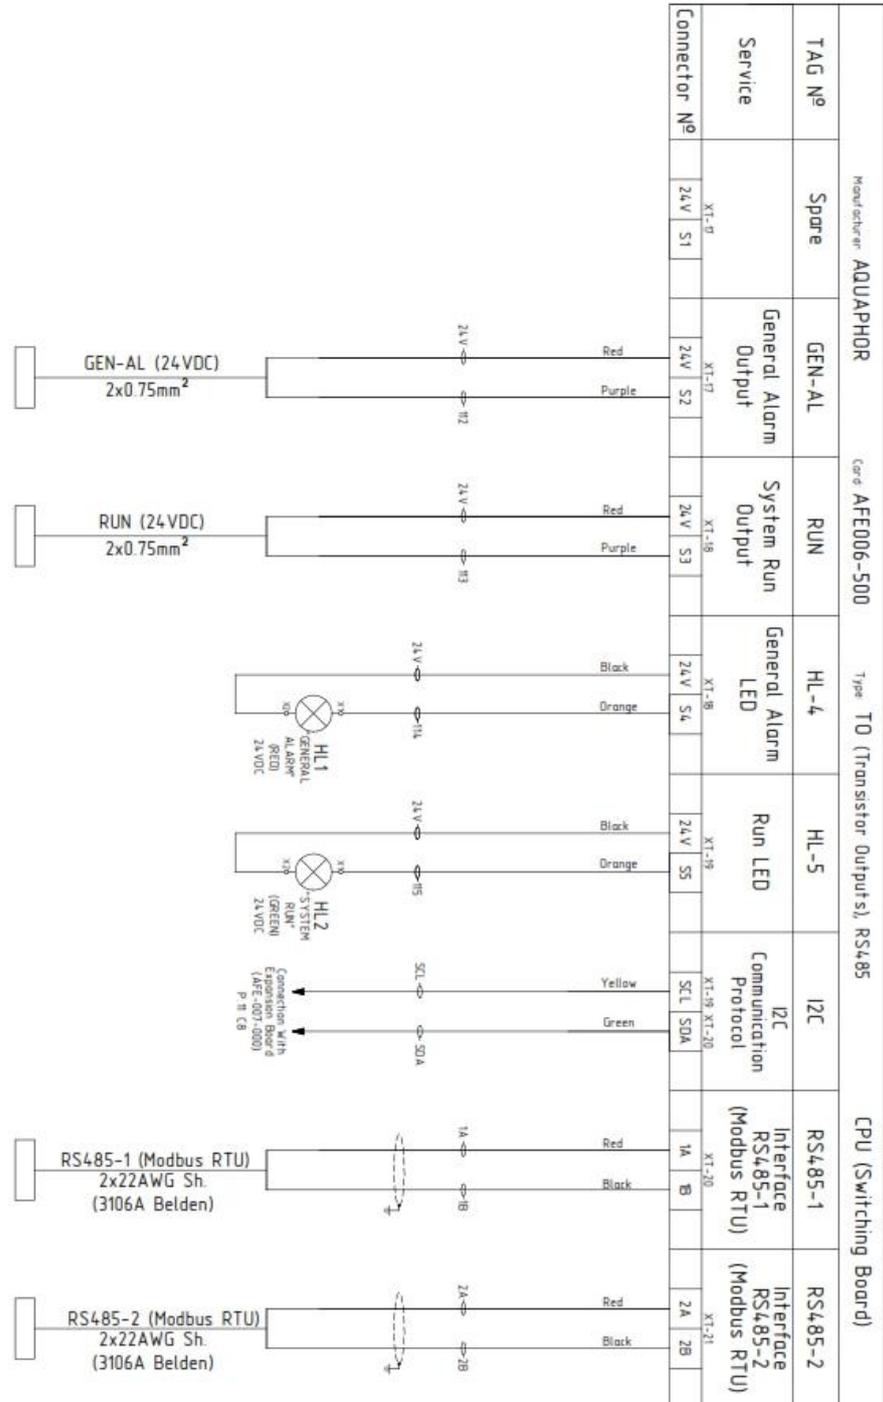

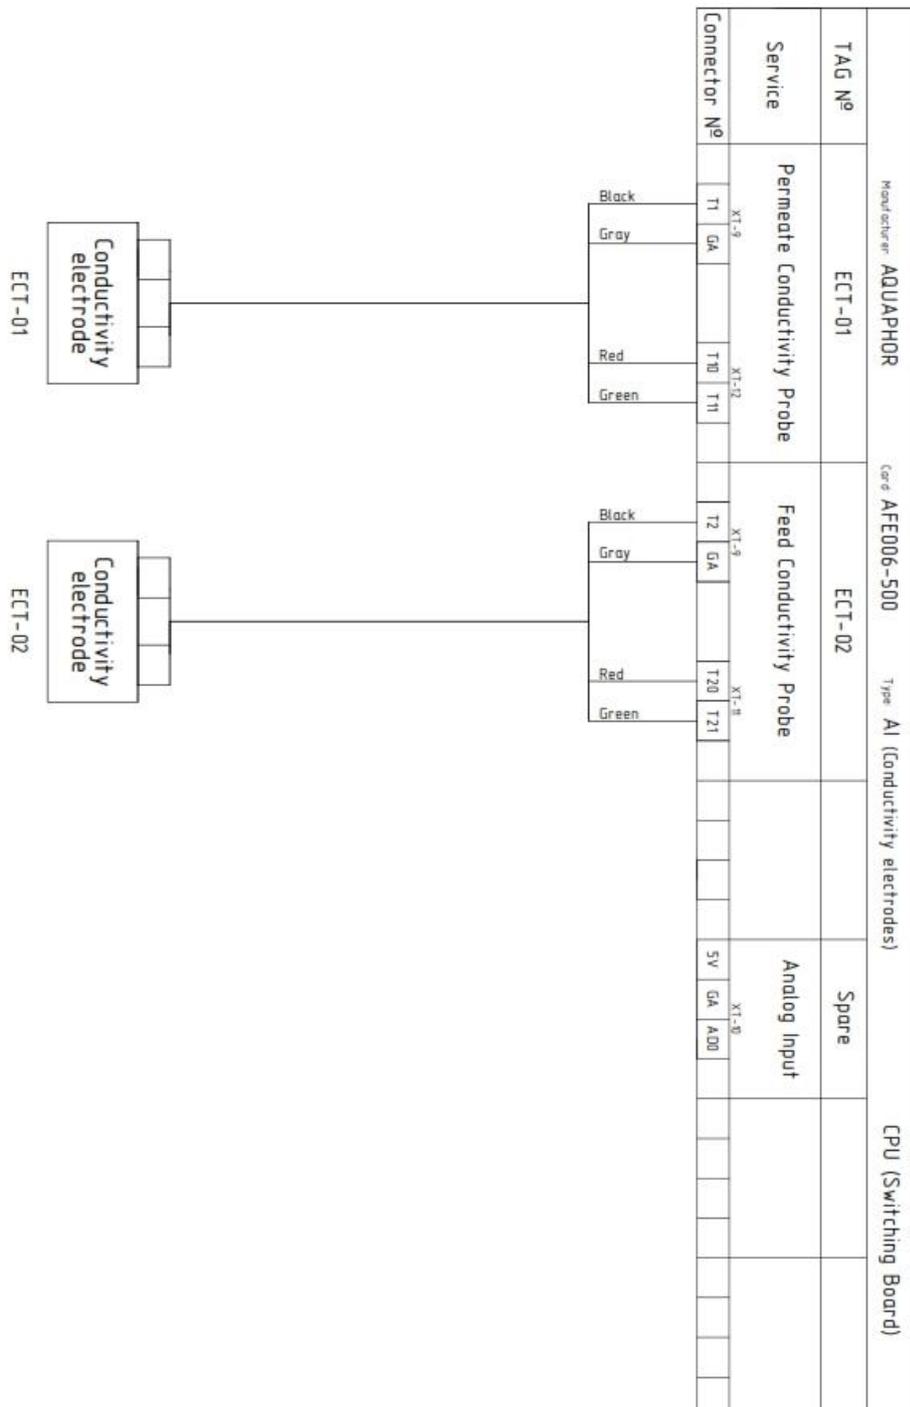

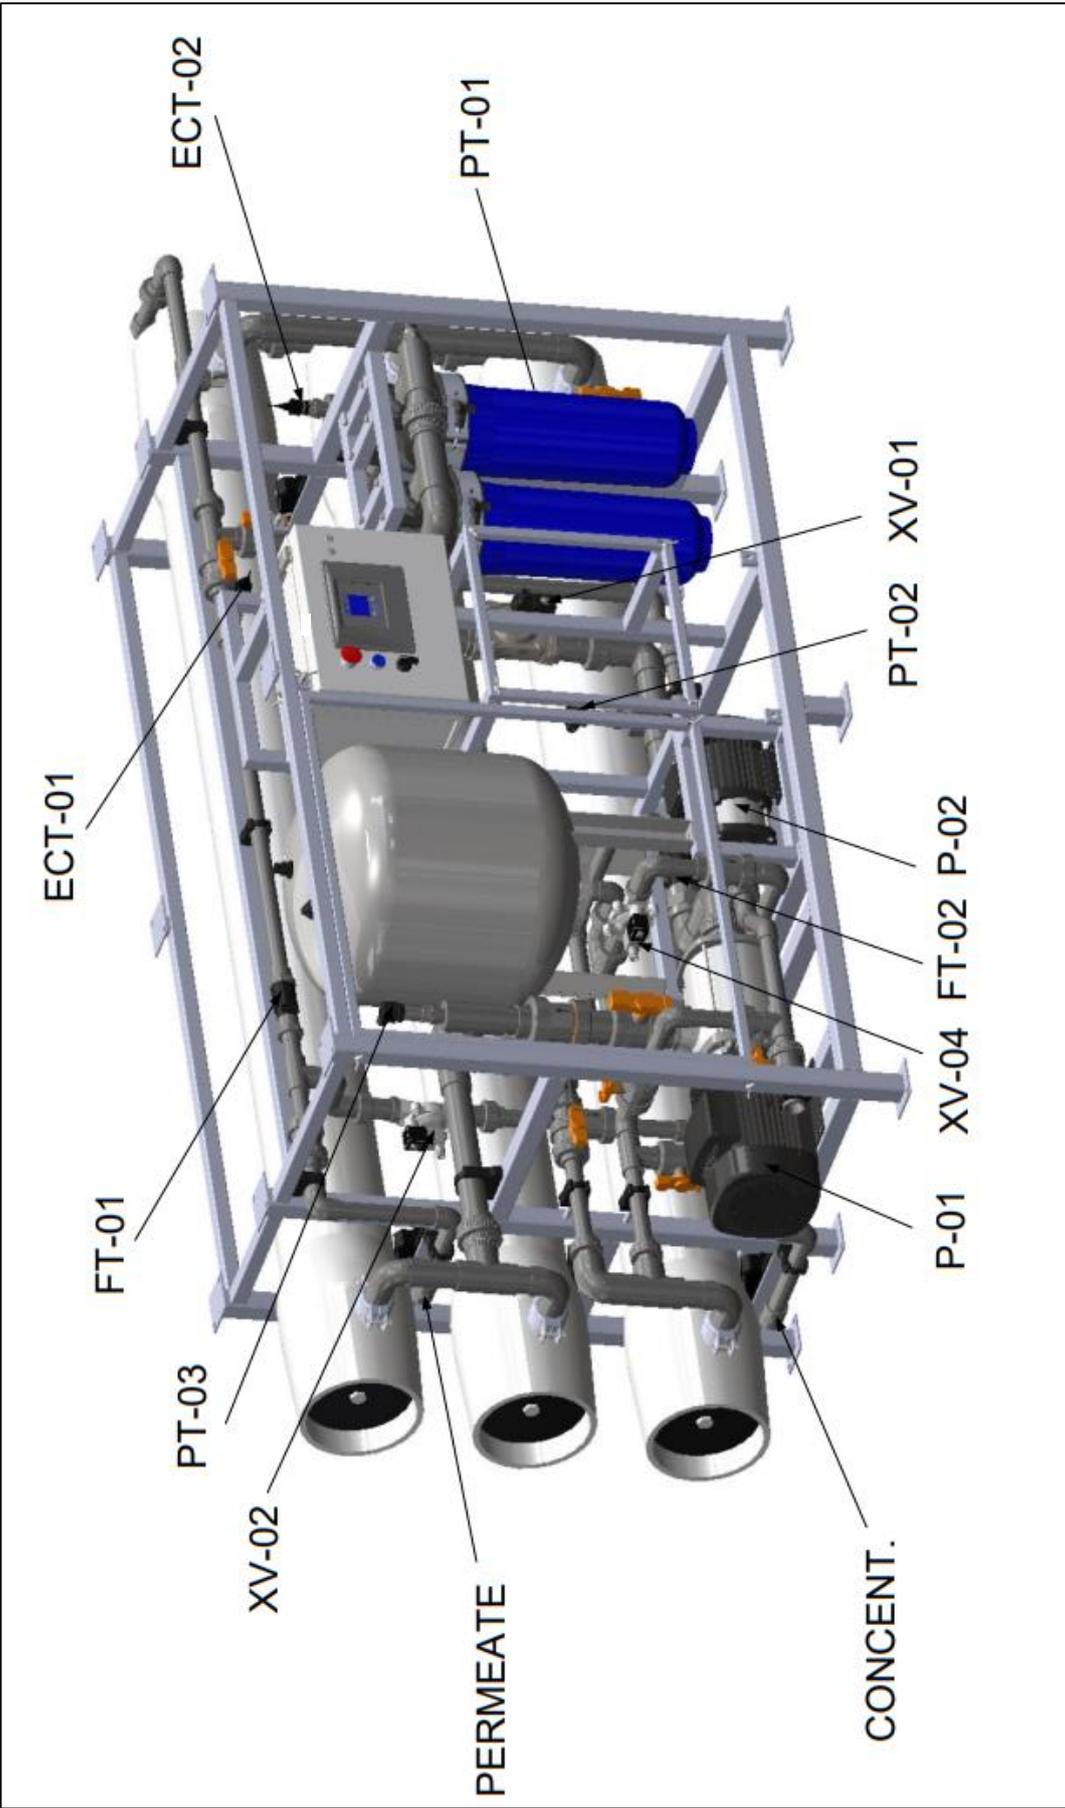


4. CONTROL PANEL

4.1 GENERAL INFORMATION

- The controller is protected by an osmosis control panel with IP-55 standard class and higher.
- The system nodes are controlled through the power board.
- The commutation of the controller and the power board is realized through quick-detachable connections.

4.2 ELEMENTS ON THE CONTROL PANEL

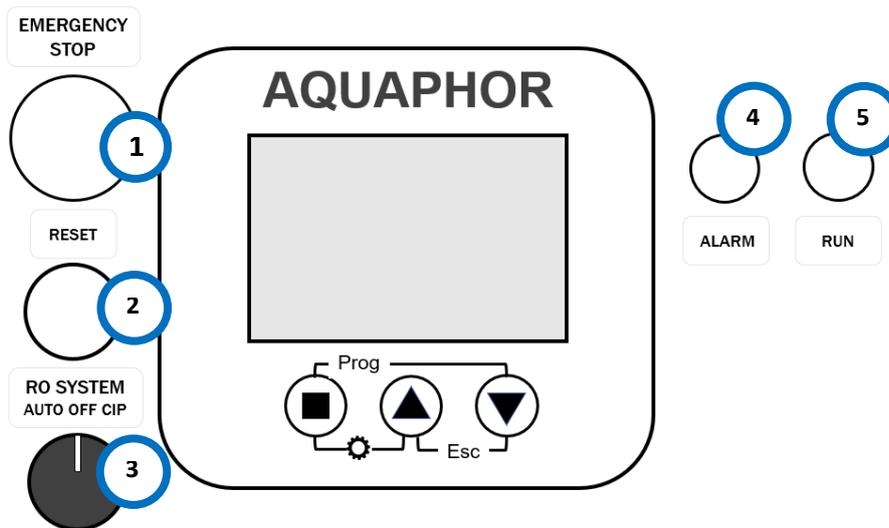

Nº	ELEMENT	FUNCTION
1	« Emergency stop » button	Emergency shutdown of the system. When pressed, it is fixed in a closed state and with its contacts blocks the power part of the installation, thereby completely de-energizing the <i>controller</i> .
2	« Reset » button	Resetting the current program (return to the start window SYSTEM OFF).
3	« RO system » mode switcher	OFF - Standby mode AUTO - Automatic mode CIP - Service Mode
4	« Alarm » lamp indicator	Emergency situation
5	« Run » lamp indicator	The unit operates normally

5. TECHNICAL DATA DESCRIPTION

5.1 REQUIREMENTS ON SITE

5.1.1 WATER QUALITY

Designation	Unit	Value
Water supply for the reverse osmosis system		
Temperature	°C	5 - 30
Turbidity factor	NTU	<1
Blocking factor (sludge / index of sedimentation density)	SDI	<3
Feed pressure	bar	2.5 - 6
Salinity	ppm	<1000
Total hardness	°dH	0 - 15
pH under constant operation	-	6.5 - 9
Short term for the rinse	-	1 - 12
Odour	-	odourless
Oil	mg/l	0
Free chlorine	mg/l	0
Iron	mg/l	<0.1
Manganese	mg/l	<0.1
Sewage		according to local regulations

5.1.2 INSTALLATION ROOMS

Designation	Unit	Value
Temperature	°C	5 to 40
Lighting	lx	at least 150
Source of fresh air	-	aerate and deaerate sufficiently

5.1.3 REVERSE OSMOSIS DATA

Designation	Unit	Value
Permeate		
APRO 3000 LPH		
With 20 °C	l/h	3000
With 10 °C	l/h	2100
APRO 4000 LPH		
With 20 °C	l/h	4000
With 10 °C	l/h	2800
APRO 6000 LPH		
With 20 °C	l/h	6000
With 10 °C	l/h	4200
Operating pressure max.		
	bar	7-10
Power		
	kW	0.7
Control		
	W	10
Connections		
Raw water	NW	2''
Concentrate	NW	1''
Permeate	NW	1''
Pressure fluctuations max.		
	bar	± 1
RO salt retention rate max.		
	%	Up to 95
Operating temperature		
	°C	30 - 40
Surrounding temperature		
	°C	4 - 40
Electric connection		
		EU plug
Connection		
	-	1/N/PE
Voltage		
	V	400
Frequency		
	Hz	50
Power		
	kW	2.5 (3000), 3.7 (4000), 3.7 (6000)
Nominal current		
	A	10 (3000), 16 (4000), 16 (4000)

6. INSTALLATION

6.1 SAFETY POINTERS



DANGER: Danger for life, Electric shock

- Turn OFF the main switch and avoid its reactivation.
- Let only the competent staff carry out the electric work.
- Ensure the absence of power before starting to work.
- Consider the national regulations, the safety ones, and if available, the factory prescriptions.



WARNING: Dangerous tasks

- Ensure that only specially trained personnel carries out the tasks.
- Ensure that the laws, regulations, and directives applicable to the site of use are fulfilled.
- Before beginning the tasks, ensure that the air and water systems are pressureless.
- Ensure that the tasks are carried out with suitable tools only.
- Ensure the use of adequate climbing aids and protective measures before working at height to prevent a fall.
- Ensure that the safety data sheets of the auxiliary and operating materials used are fulfilled.
- Ensure the use of personal protective equipment (helmet, non-skid safety shoes, safety goggles, ear protectors, gloves, etc.)
- Consider stumbling and spraining areas.
- Avoid slip hazard.
- Provide sufficient lighting.
- Provide sufficient aeration.
- In case of danger, actuate the emergency-stop switching device.



CAUTION : Possible contamination of the washing water / air; Infections and diarrhea

- Wear personal protective equipment (waterproof clothing, boots, gloves and breathing protection (e.g. particle filtering half-mask).
- Avoid any contact with washing water and spray mist.
- Provide sufficient aeration.

6.2 GENERAL POINTERS



ATTENTION: Contamination of the unit coming from the drain, Blocking of the module

- Do not lead the concentrate line directly in the drain but fasten it approx. 10 - 15 cm over the drain with appropriate means.



ATTENTION: Corrosion; Destruction of the lines

- Use corrosion-resistant material for all the water lines

6.3 WATER CONNECTION

Install a pressure resistant hose between the outlet of the softening installation and the raw water connection of the reverse osmosis unit.



ATTENTION: Contamination of the unit coming from the drain, Blocking of the module

- Do not lead the concentrate line directly in the drain but fasten it approx. 10 - 15 cm over the drain with appropriate means.

INSTALLATION

- **Concentrate connection:** Install a hose between the concentrate outlet of the reverse osmosis unit and the sewer junction and let it hang 10 to 15 cm over the drain, to prevent the contamination of the unit.
- **Permeate connection:** Install a hose temporarily between the outlet for permeate of the reverse osmosis unit and the sewer junction.

1. System Location

The RO system should be located away from direct sunlight, wind, and rain. You should also account for freezing temperatures and remember that lower temperatures reduce production. It would also be wise to leave plenty of room around the unit for future service.

2. Plumbing

The high-pressure pumps that feed the RO unit require a constant flow of water at a sufficient flow rate.

3. Feed Water

Piping for the feed water should be either copper or plastic as iron or carbon steel pipe could increase the iron content of the feed water. Temperature of the feed water should not exceed 35° C. This unit comes equipped with pressure

differential safety shut-off on the pre-filter so as not to starve the pump of water. This will also let you know when to change the pre-filter.

4. Product Water (Permeate) Line Connection & Primary membrane flushing

All our equipment comes with a built-in check valve on the permeate line.

Note: When starting up a new unit, it should run to drain for 30-60 minutes to flush the new membranes. Be sure this product line is not shoved into a drain. If possible, run the product line from above with a substantial air-gap spraying into the drain from above. The normal plumbing code is at least twice the diameter of the drainpipe. A larger gap is preferable to avoid splashing of water from the drain. This may allow bacteria growth that may be able to migrate back into the unit thus causing a potential problem.

5. Concentrate or Waste Line Connection

Connect the concentrate or waste line to the outlet side of the concentrate flow meter. Run this line to an open drain with no restriction and leave an airgap at the drain end. Please, follow all local plumbing codes.

6. Electrical

Properly sized electrical service is required for proper operation of system.

7. Level Controls

Level controls are a float type in an atmospheric storage tank or a O-float level valve. Both are optional with our equipment and can be installed by us. Either one are wired directly into the controller and are controlled by the controller.

8. Pumps

All our units come with heavy-duty pumps, and they are not self-priming. Never let a pump run dry. This may damage the pump and void the warranty.

9. Pre-Filtration

Our units are equipped with a sediment pre-filter which will remove particles down to 5 microns in size. As this pre-filter plugs up it will restrict the flow of water. At this point the controller will shut down the unit until the filter is changed. This option is standard on our equipment. Depending on the feed water, more pre-treatment may be necessary. A water analysis is required to determine the need.

10. Installation.

Prior to start-up, carefully inspect the system for loose connections that may have loosened during shipping.

11. Membrane installation

Should the membranes need to be installed or replaced, be sure to notice how they were removed. The flow of water will always be from the end of the membrane with the brine seal to the end without the brine seal.

7. CONFIGURATION

APRO 3000/4000/6000 LPH system can be configured in two ways:

- By using the three-button keyboard of the controller.
- By using the APRO Monitor application on the screen of a mobile device.

7.1 STARTING

7.1.1 CONNECTION



CAUTION: It is recommended to use eyes and hands protection while unpacking the system.

1. Unpack the system and place it to the permanent place of work.
2. Make sure the membranes and filter cartridges are installed.
3. Connect the inlet connection to the raw water supply.
4. Connect the electricity plug to ~220 V.
5. Connect the dosing suction pipe to the antiscalant tank.
6. Before starting work, move RO switcher to the AUTO position, make sure to perform degassing (Check 10.1 Dosing pump degassing)
7. Connect permeate connector to the permeate supply line.
8. System is ready.

If an additional atmospheric permeate tank is used, connect the permeate line via float switch. If a permeate supply pump (P-04) is used, connect the low level switch (LLS-03) to the control panel.

7.2 CONFIGURATION VIA CONTROLLER KEYBOARD

STARTING WINDOW

When power is applied to the switchboard, the program starts in the System OFF mode, opening the start window with the following parameters:

2. The current time and date
3. The name of the program
4. The name of the production
5. The possibility of starting the system infiltration mode
6. The position of the three-position switch
7. Errors that prevent the installation from starting infiltration mode
8. The serial number of the board
9. The program version
10. The availability of Wi-Fi
11. The availability of mkS card

In the start window, you can perform the following operations:

- Switching using a three-position hereinafter switch to the "AUTO" position. The system will enter the filtering mode through the "Start-Up" mode.
- Switching the switch to the "CIP" position. The system will enter the state of chemical flushing system elements.
- Pressing the "OK" ■ button on the three-position switch for 2 seconds will turn on the system statistics window for 4 seconds (the function is convenient for defining service intervals).
- Pressing the "Up" ▲ button on the three-position switch for 5 seconds will start the calibration routine of the TDS (Total Dissolved Solids) sensors.
- Pressing the "OK" ■ and "Down" ▼ buttons on the three-position switch simultaneously will start the subroutine for configuring system devices.

If the starting parameters meet the system's requirements, then an indication of the system operation will be displayed on the controller screen:



7.3 SYSTEM START-UP



1. Feed Pump ON




2. Feed Press ON
LPS1 check




3. Feed Valve XV-01
opening




4. Valve XV-02 ON

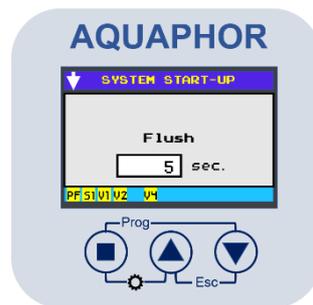

5. Flush 5 seconds

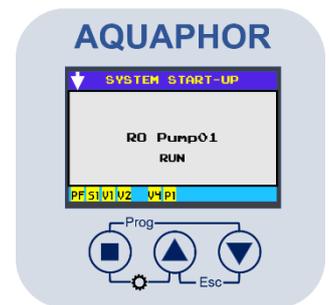


6. RO pump P01 ON

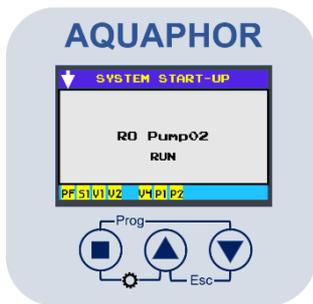

7. RO pump P02 ON



8. Pump Press
HPS check

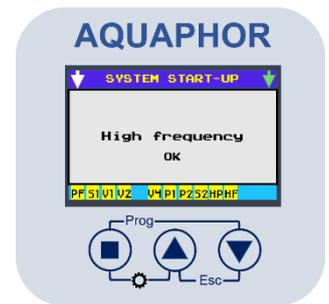

9. High frequency XV-04
check

7.4 SYSTEM SHUT-DOWN



1. RO pumps OFF




2. Feed pump OFF



3. Feed Valve closing



4. Valve 05 opening

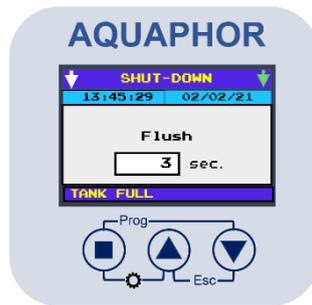

5. Flush 3 seconds



6. System shut-down 28 sec



7. Feed OK

7.5 SYSTEM RUN

System run panel has a few types of display, representing the current parameters of the system. Pressing “Up” ▲ and “Down” ▼ buttons will switch the display to another one.



General display

- Permeate conductivity (μS)
- Permeate flow (LPM)
- Current errors
- Current flush



Flow display

- Permeate flow (LPM)
- Concentrate flow (LPM)
- Feed flow (LPM)
- Recovery, %



Conductivities display

- Permeate conductivity (μS)
- Permeate temperature, $^{\circ}\text{C}$
- Feed conductivity (μS)
- Feed temperature, $^{\circ}\text{C}$



Pressure display

- Feed pressure
- Inlet pressure
- RO pressure
- Permeate pressure




Cartridge display

- Resource, m^3 – a countdown of a remaining resource. Resource should be set up initially (7.7, Setup-23)
- Pressure drop, bar

7.6 EQUIPMENT SETUP

1. Move the switch to the **OFF** position to start setting up the system.

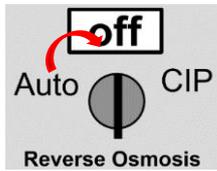

2. Perform dosing pump degassing (**Maintenance, 10.1**).
3. Make sure there is no leakage.
4. Check all the setups and programs (**7.3, 7.4**).
5. Whenever the low level sensor is off, it is recommended to perform P-04 deaeration (**Maintenance, 10.1**).

7.6.1 EXAMPLE OF SOFTWARE SETUP


1. To enter the settings menu, use the controller's three-button keyboard located under the monitor screen.



2. To open **Configuration** menu, press the “Ok” ■ and “Down” ▼ buttons.



3. If you want to add or exclude an element from the system, press the “Up” ▲ button. By pressing the “Ok” ■ button, we confirm the selection and proceed to the next element of the system.

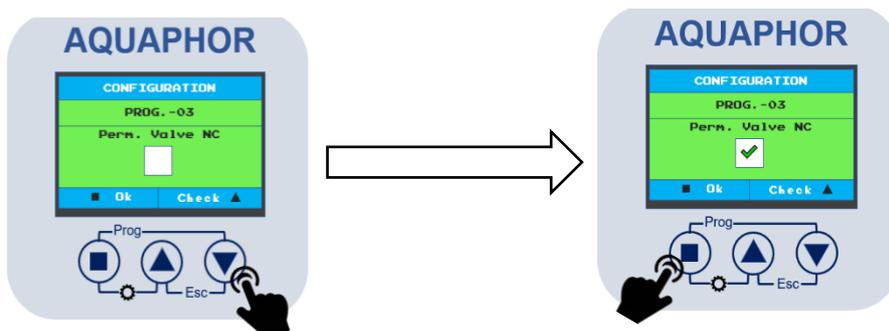

If the program is on (✓), the valve is normally closed and operating in a described way. If the program is off, the valve closes when the maximum allowed value of LLS is exceeded.

PROGRAM 01: FEED PUMP (P-03)

If the input water does not meet the requirements of this manual for the minimum pressure and required volume, the system can be connected to the existing water supply through the raw water supply system. For this program, a pump for raw water should be added. By default, a storage tank with raw water is also added.



The raw water pump works under the following conditions:

- The program is activated
- The three-position switch is in the "AUTO" position
- There is enough water in the storage tank.
- There is a signal from the RO system to start work

PROGRAM 02: PRETREATMENT (PTS-01)



This program turns on the water pretreatment process.

The pretreatment system (PTS-01) will carry out the regeneration according to a given program, and the results will be displayed on the controller screen. During this period, the RO system is in waiting mode.



The time of the pretreatment regeneration does not depend on the controller settings. When the pretreatment regeneration mode is activated, all RO system units turn OFF, and the raw water feed pump turns on. After finishing the regeneration process, the system continues to work automatically.

PROGRAM 03: FLUSH VALVE *



Presence of a primary flushing valve. The valve is flushing the membranes before start-up and shut down periods.

Current system is lacking flush valve.
Program is not required.

PROGRAM 04: PERMEATE VALVE NC (XV-02)



Presence of a primary permeate drainage valve (XV-02). The valve turns on when the set value of the product electrical conductivity is exceeded.



During the system operation, the drainage valve opening symbol will be displayed on the controller during the frequency reset (**the green arrow indicator should be in the right upper corner**).

PROGRAM 05: SUPPLY PUMP (P-04)



If there is a need to quickly supply a large volume of purified water quickly, a non-pressurized RO water supply system can be connected. The reverse osmosis system will fill the additional tank with RO water to the specified level.

PROGRAM 06: PERMEATE FLOW TRANSMITTER (FT-01)



Enables/disables permeate flow sensor (FT-01).

PROGRAM 07: FEED FLOW TRANSMITTER (FT-02)



Enables/disables feed flow sensor (FT-02).

PROGRAM 08: HIGH PRESSURE SWITCH (HPS-01)



Enables/disables high pressure switch (HPS-01).

PROGRAM 09: PERMEATE FLUSH (XV-05)



Whenever the system is in stand-by mode, enables membrane flush with permeate. Permeate is supplied by XV-05 valve.

PROGRAM 10: PULSE DOSING *



Enables pulse dosing control.

Current system is lacking pulse dosing.
Program is not required.

PROGRAM 11: DOSING LEVEL SW. (LLS-02)



Enables/disables low antiscalant level switch.

PROGRAM 12: HIGH FREQUENCY RO



Enables the frequency concentrate drainage.

PROGRAM 13: HF VALVE NO *



Enables/Disables high frequency valve to be normally opened.

PROGRAM 14: DOUBLE PUMP RO (P-02)



Enables concentrate recirculation pump (P-02).

PROGRAM 15: PERMEATE CONDUCTIVITY (ECT-01)



Enables RO permeate conductivity sensor (ECT-01).

PROGRAM 16: RAW WATER CONDUCTIVITY (ECT-02)



Enables raw water conductivity sensor (ECT-02).

PROGRAM 17: FEED LOW PRESSURE TRANSMITTER (LPT-01)



Enables feed low pressure sensor (LPT-01).



If program is disabled, the system is protected by LPS-01.

PROGRAM 18: FEED PRES. TRANSMITTER 4-20 mA (LPT-01) *OPTIONAL



If the program enabled, the feed pressure sensor range is 4 – 20 mA.
If the program disabled, there is an analogue sensor, and its range is 0 – 5 mV.
The pressure range of the sensor is 0 – 10 bar.

PROGRAM 19: INLET LOW PRES. TRANSMITTER



Enables feed low pressure sensor (LPT-02).

PROGRAM 20: INLET PRES. TRANSMITTER 4-20MA (LPT-02) *OPTIONAL



If the program enabled, the inlet pressure sensor range is 4 – 20 mA.
If the program disabled, it is an analogue sensor, and its range is 0 – 5 mV.
The pressure range of the sensor is 0 – 10/40 bar (**Prog.22**).

PROGRAM 21: RO HIGH PRESSURE TRANSMITTER (HPT-01)



RO high pressure sensor (HPT-01).




If the program is disabled, the system is protected by HPS-01.

PROGRAM 22: RO HIGH PRESSURE TRANSMITTER RANGE 0-40



If the program enabled, the RO high pressure sensor range is 0 – 40 bar.
If the program disabled, the RO high pressure sensor range is 0 – 10 bar.

PROGRAM 23: RO PRESSURE TRANSMITTER 4-20MA (HPT-01)

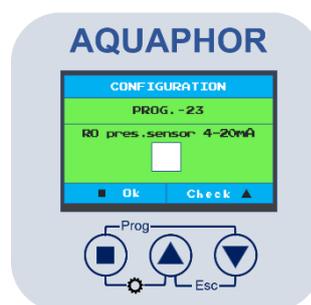


If the program enabled, the inlet pressure sensor range is 4 – 20 mA.
If the program disabled, it is an analogue sensor, and its range is 0 – 5 mV.
The pressure range of the sensor is 0 – 10/40 bar (**Prog.22**).

PROGRAM 24: PERMEATE PRESSURE TRANSMITTER (PT-01) *OPTIONAL



Enables/disables permeate pressure sensor (PT-01).

PROGRAM 25: PERMEATE PRESSURE TRANSMITTER 4-20mA (PT-01)

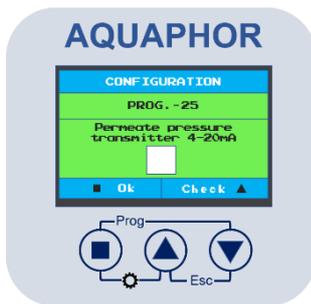

If the program enabled, the permeate pressure sensor range is 4 – 20 mA.
If the program disabled, it is an analogue sensor, and its range is 0 – 5 mV.
The pressure range of the sensor is 0 – 10/40 bar (**Prog.22**).


7.7 SETUPS

SETUP 01: START-UP FLUSH




Setting the start-up flush time.

SETUP 02: SHUT-DOWN FLUSH

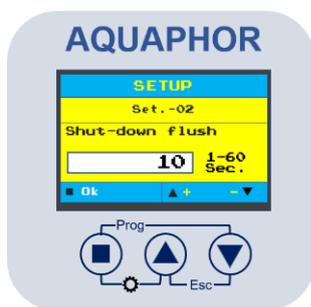

Setting the shut-down flush time.

SETUP 03: STAND-BY FLUSH

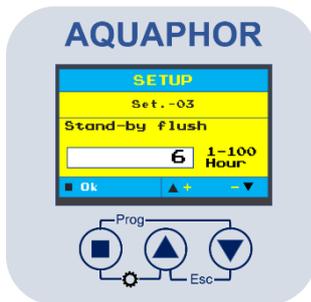

Setting the stand-by flush period (period in hours).

SETUP 04: HIGH CONDUCTIVITY PERMEATE WATER ALARM



Setting the point for the product conductivity limit (max value).

SETUP 05: HIGH CONDUCTIVITY FEED WATER ALARM



Setting the maximum value for the feed conductivity limit.

SETUP 06: LOW PRESS. DELAY



Setting the delay to stop the system after a signal of low input pressure is received.

SETUP 07: DOSING PULSE/MIN *



Setting the number of pulses per minute.

Current system is lacking pulse dosing.
Setup is not required.

SETUP 08: PERMEATE FLOW 'K'



Setting the number of pulses per liter.

Note: the parameters are set by flowmeter manufacturer.

SETUP 09: FEED FLOW 'K'



Setting the number of pulses per liter.

Note: the parameters are set by flowmeter manufacturer.

SETUP 10: FLUSH PULSE/MIN



Setting the number of pulses per minute.

SETUP 11: FLUSH PULSE DURATION



Setting the number of periodic flushing pulse duration.

SETUP 12: PERIODIC FLUSH/H



Setting the number of periodic flushes per hour.

RECOVERY SETUPS (SETUPS 10-13)

The table below represents the values required for the specific recovery percentage. The setups should be performed under 20 °C and conductivity <2000 uSM.

It is recommended to start setting up with the change of Flush Pulse Duration value (Setup 11). By changing the values of Setups 10 – 13, the user will gradually get the desired recovery percentage.

APRO 3000 LPH

	SET-10	SET-11	SET-12	SET-13
Recovery %	Flush pulse/min	Flush pulse duration (s)	Periodic flush/hour	Periodic flush duration (s)
70	2	3	15	10
75	2	2	15	10
80	1	5	15	10
85	1	3	15	10
90	1	1	15	10

APRO 4000 LPH

	SET-10	SET-11	SET-12	SET-13
Recovery %	Flush pulse/min	Flush pulse duration (s)	Periodic flush/hour	Periodic flush duration (s)
70	3	5	15	10
75	2	4	15	10
80	3	2	15	10
85	1	4	15	10
90	1	3	15	10
95	1	2	15	10

APRO 6000 LPH

	SET-10	SET-11	SET-12	SET-13
Recovery %	Flush pulse/min	Flush pulse duration (s)	Periodic flush/hour	Periodic flush duration (s)
65	3	6	20	15
70	3	5	20	15
75	2	6	20	15
80	2	5	15	10
85	2	4	15	10
90	2	2	15	10

SETUP 13: PERIODIC FLUSH DURATION



Setting the periodic flushing duration.

SETUP 14: FULL TANK DELAY



Setting the delay to stop the system after the full tank signal is received (HPS-02).


SETUP 15: PERMEATE LOW FLOW



Setting the minimum permeate flow signaling to stop the system (Check 8.7 Alarm-09).

This is not the absolute minimum.

SETUP 16: CONCENTRATE LOW FLOW

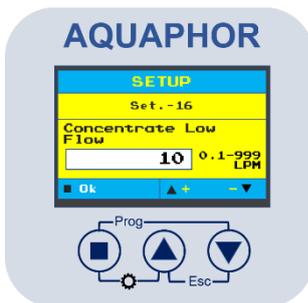


Setting the minimum concentrate flow.

SETUP 17: LOW FEED PRESSURE



Setting the minimum feed water pressure.

SETUP 18: LOW INLET PRESSURE

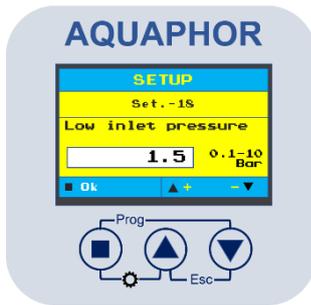


Setting the minimum inlet pressure.

SETUP 19: HIGH RO PUMP PRESSURE ALARM



Setting the highest acceptable RO pump pressure value.

SETUP 20: SYSTEM STOP PERMEATE TANK PRESSURE ALARM

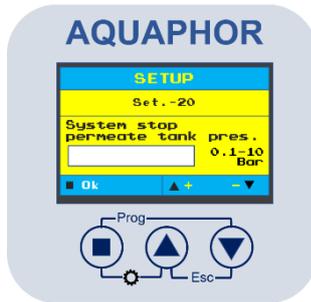

Setting the highest acceptable permeate tank pressure value.

Turned off in this system.


SETUP 21: SYSTEM START PERMEATE TANK PRESSURE



Setting the starting value of permeate tank pressure.


Turned off in this system.

SETUP 22: CARTRIDGE FILTER PRESSURE DROP ALARM

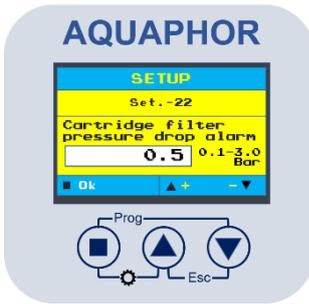

Setting the minimum value of the cartridge filter pressure.

SETUP 23: CARTRIDGE FILTER RESOURCE

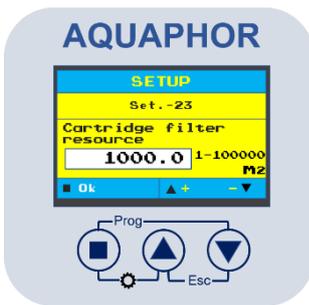

Setting the volume of cartridge filter resource.

SETUP 24: SYSTEM ID NUMBER



Setting the system ID number (1-255).

SETUP 25: YEAR



Setting the year (18-50).

SETUP 26: DATE/MONTH



Setting the date (DD:MM).

SETUP 27: TIME



Setting the time (hh:mm).

8. ALARMS AND TROUBLESHOOTING


If there is any critical error in operation, the system is switched to the "Alarm" error mode. The "Alarm" window contains information about:

- the name(s) of critical error(s)
- the number of critical errors
- the time until the next attempt to restore the system

To enter the standby state and return to the start window, move the switch to the OFF position. In case of the system's automatic reset after the minor errors, the program switches the system through the "Start-Up" mode to the filtering mode.

8.1 ALARM-01: LOW LEVEL IN THE RAW WATER TANK


The error occurs when **the level in the raw water tank T-01 is low**. The option is activated if there is no signal from the **LLS-01** low water level sensor in the source water tank T-01 for 10 seconds.

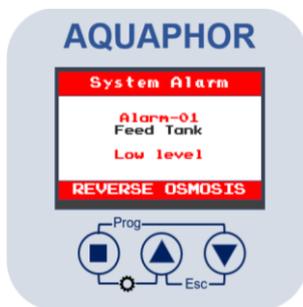

Solution: The error is solved when the signal from the low water level sensor is received. Otherwise, check RO water supply and LLS-01 functionality.

8.2 ALARM-02: PRETREATMENT SYSTEM ERROR

The error occurs when **the pre-filtration system is in the PTS-01 regeneration mode for more than three hours**.

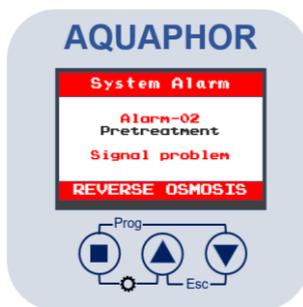

Solution: Check the functionality of pretreatment equipment, RO system controller cable, and pretreatment system controller.

8.3 ALARM-03: ANTISCALANT TANK LOW LEVEL * **NOT REQUIRED**


The error occurs when **there is no signal from the LLS-02 low level sensor in the antiscalant T-02 tank for 10 seconds.**



Solution: The error is solved when the signal from the low water level sensor is received. Otherwise, check the presence of antiscalant and sensor functionality.
! After antiscalant replacement, it is required to perform dosing pump degassing. (Maintenance, 10.1).

8.4 ALARM-04: RAW WATER LOW PRESSURE


The error occurs when **there is no signal from the LPS-01 low pressure sensor in the supply line for a specified time (Setup. -06).** In this case, the raw water pump is activated, the pre-treatment system is activated, and it is not in regeneration mode. After a problem occurs, the system will try to restart. If the problem persists, the osmosis system will stop until the problem is resolved.

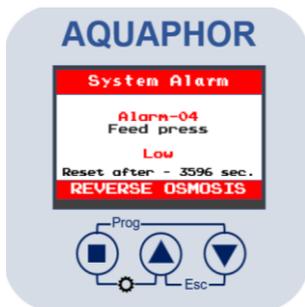

Solution: The system can be reset manually by pressing the reset button or by the automatic resetting every hour. Otherwise, check RO water supply and LPS-01 functionality.

8.5 ALARM-05: LOW INLET PRESSURE

The error occurs when **there is no signal from the LPS-02 low pressure sensor in the water supply line to the RO system for a specified time (Setup-06).** In this case, the feed water supply valve to the RO XV-01 system is open; the raw water supply pump is activated. The pretreatment system is activated and is not in regeneration. After a problem occurs, the system will try to restart. If the problem persists, the osmosis system will stop until the problem is resolved.

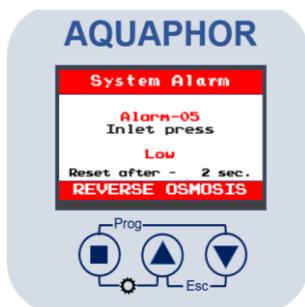

Solution: The system can be reset manually by pressing the reset button or by automatic reset every hour. Otherwise, check the functionality of raw water supply, **LPS-02, XV-01**. Change cartridges (**Maintenance, 10.4**).

8.6 ALARM-06: HIGH INLET PRESSURE TO RO MEMBRANE UNIT

The error occurs when the osmosis pump is in process, and **there is no signal from the HPS-02 high-pressure sensor at the membrane inlet for 10 seconds**. After a problem occurs, the system will try to restart it again. If the problem persists, the osmosis system will stop until the problem is resolved.



Solution: The error can be fixed manually by pressing the reset button or by automatic reset every three hours. Perform CIP or change the membrane, check HPS-02 functionality.

8.7 ALARM-07: RO PUMP OVERLOAD

The error occurs when **a signal is received from the thermal protection of the pump motor of the RO system P-01**.



Solution: Check RO pump P-01 and overload protection switch (inside the control box) functionality.

8.8 ALARM-08: HIGH ELECTRICAL CONDUCTIVITY OF PERMEATE


The error occurs when the pump of the RO system is working, the system is not in flushing mode or CIP, and **the conductivity value of the RO system permeate is bigger than the set value (Setup-04) for 5 minutes**. After a problem occurs, the system will try to restart it again. If the problem persists, the osmosis system will stop until the problem is resolved.



Solution: The system can be reset manually by pressing the reset button or by automatic reset every three hours. Perform PCP-01 calibration, perform CIP, or change the membrane.

8.9 ALARM-09: MINIMUM PERMEATE FLOW


The error occurs when the pump of the RO system (P-01) is running, and **the osmosis system permeate flow value is less than the set value (Setup-14) for 5 minutes**. After a problem occurs, the system will try to restart again. If the problem persists, the osmosis system will stop until the problem is resolved.

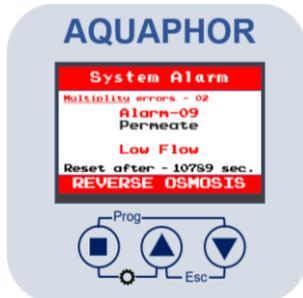

Solution: The system can be reset manually by pressing the reset button or by automatic reset every three hours. Check the functionality of FT-01. Perform CIP or change the membrane.

8.10 ALARM-10: MINIMUM CONCENTRATE FLOW

The error occurs when the option is activated, the RO system is running, the system is not in flushing mode or CIP, and **the osmosis system permeate flow value is less than the set value (Setup-14) for 5 minutes**. After a problem occurs, the system will try to restart again. If the problem persists, the osmosis system will stop until the problem is resolved.

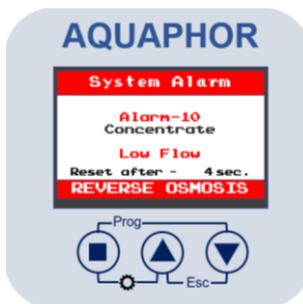

Solution: The system can be reset manually by pressing the reset button or by automatic reset every three hours. Check the functionality of the concentrate sensor and automatic concentrate valve XV-04.

8.11 ALARM-11: LOW PERMEATE LEVEL


The error occurs when **there is no signal from the LLS-03 low water level sensor in the T-03 permeate tank for 20 minutes**.



Solution: The error is fixed when a signal from the low water level sensor is received (when the permeate will be present in the tank).

8.12 ALARM-12: HIGH FEED CONDUCTIVITY

The error occurs when the pump of the RO system **P-03** is working, and **the high feed conductivity of the raw water of the RO system is greater than the set value for 5 minutes**. After a problem occurs, the system will try to restart it again. If the problem persists, the osmosis system will stop until the problem is resolved.

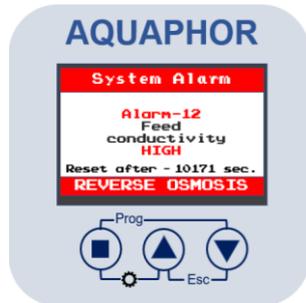

Solution: The system can be reset manually by pressing the reset button or by the automatic resetting every three hours. Check the raw water supply quality, functionality of **ECT-02** and pretreatment system

8.14 ALARM-14: FEEDPRESSURE SENSOR

The error occurs when **the feed pressure value is lower than the set value (Setup-17) for 5 minutes**.



Solution: Check the sensor and cable connection. If there is an error after checking, then replace the sensor.

8.15 ALARM-15: INLET PRESSURE SENSOR

The error occurs when **the inlet pressure value is lower than the set value (Setup-18) for 5 minutes**.



Solution: Check the sensor and cable connection. If there is an error after checking, then replace the sensor.

8.16 ALARM-16: RO PRESSURE SENSOR

The error occurs when **the RO pressure value is higher than the set value (Setup-19) for 5 minutes**.



Solution: Check the sensor and cable connection. If there is an error after checking, then replace the sensor.

8.17 ALARM-17: PERMEATE PRESSURE SENSOR

The error occurs when the permeate pressure value is higher than the set value (Setup-20) for 5 minutes.





Solution: Check the sensor and cable connection. If there is an error after checking, then replace the sensor.

8.18 WARNINGS



Solution: Replace the cartridge and press RESET for 5 sec.

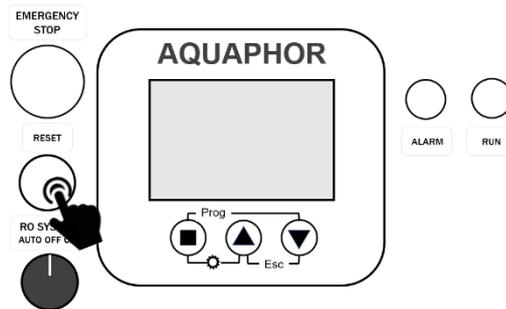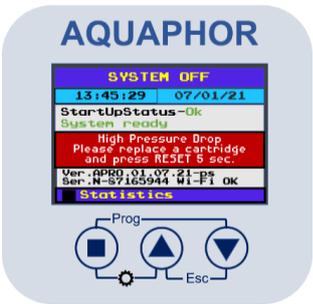


Alarm №	Symptoms	Possible causes	Corrective Action
Alarm-01	Low level in the raw water tank	Low level in the raw water tank T-01	Check the presence of raw water; otherwise, check RO water supply and LLS-01 functionality.
Alarm-02	Pretreatment system error	The pre-filtration system is in the PTS-01 regeneration mode for > 3 hours	Check the functionality of pretreatment equipment, RO system controller cable, and pretreatment system controller.
Alarm-03	Antiscalant tank low level	No signal from the LLS-02 in the antiscalant T-02 tank for 10 seconds.	Check the presence of antiscalant or/and sensor functionality
Alarm-04	Raw water low pressure	No signal from the LPS-01 in the supply line for a specified time (Setup. -06)	Check RO water supply and LPS-01 functionality.
Alarm-05	Low inlet pressure	No signal from the LPS-02 in the water supply line to the RO system for a specified time (Setup-06).	Check the functionality of RO water supply, LPS-02, XV-01.
Alarm-06	High inlet pressure to RO membrane unit	No signal from the HPS-02 at the membrane inlet for 10 seconds.	Perform CIP or change the membrane, check HPS-02 functionality.
Alarm-07	RO pump overload	A signal is received from the thermal protection of the pump motor of the RO system P-01.	Check RO pump P-01 overload functionality.
Alarm-08	High electrical conductivity of permeate	The conductivity value of the RO system product is bigger than the set value (Setup-04) for 5 minutes	Perform PCP-01 calibration, perform CIP, or change the membrane.
Alarm-09	Minimum value of permeate flow	The osmosis system permeate flow value is less than the set value (Setup-14) for 5 minutes.	Check the functionality of FT-01. Perform CIP, or change the membrane.
Alarm-10	Minimum concentrate flow	The osmosis system permeate flow value is less than the set value (Setup-14) for 5 minutes.	Check the functionality of the concentrate sensor and automatic concentrate valve XV-04.
Alarm-11	Low permeate level	There is no signal from the LLS-03 low water level sensor in the T-03 permeate tank for 20 minutes.	Check permeate presence in the tank.
Alarm-12	High feed conductivity	The conductivity of the raw water of the RO system is greater than the set value for 5 minutes	Check the raw water supply, functionality of ECT-02 and pretreatment system.
Alarm-14	Feed pressure sensor	The feed pressure value is lower than the set value (Setup-17) for 5 minutes	Check the sensor and cable connection. If there is an error after checking, then replace the sensor.
Alarm-15	Inlet pressure sensor	The inlet pressure value is lower than the set value (Setup-18) for 5 minutes	Check the sensor and cable connection. If there is an error after checking, then replace the sensor.
Alarm-16	RO pressure sensor	The RO pressure value is higher than the set value (Setup-19) for 5 minutes	Check the sensor and cable connection. If there is an error after checking, then replace the sensor.
Alarm-17	Permeate pressure sensor	The permeate pressure value is higher than the set value (Setup-20) for 5 minutes	Check the sensor and cable connection. If there is an error after checking, then replace the sensor.


8.19 EQUIPMENT TESTING

Equipment testing mode allows to check the condition of each system's element.

1. Turn the switch to the CIP position.
2. Press ▼ for 3 seconds. The following screen will appear:

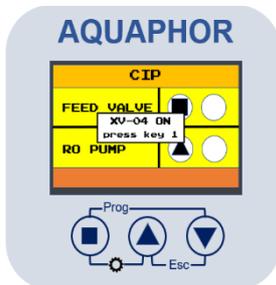

3. Press ■ to enable/disable the system's element and switch to the next one.

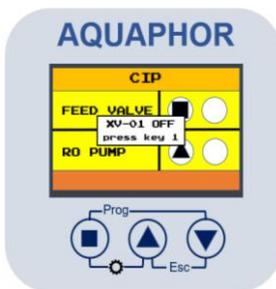

4. To close equipment testing mode, put the switch to the OFF position.

9. RO ANDROID APP (APRO APP)


APRO Monitor app functionality:

- Data transfer in the local network
- Setting up the equipment programs and its setups
- Monitoring parameters in a running system, viewing a log, statistics.
- Alarms display




! APRO Monitor app is available for Android OS only

9.1 SETTING UP

1. Download and install the APRO Monitor app from the official website of the system manufacturer (aquaphorpro.com) to your mobile device. The link can be found in the footer:

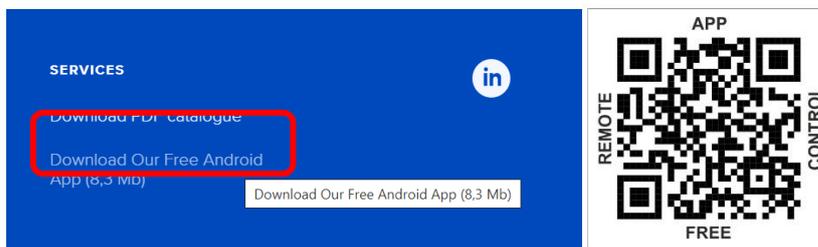

2. Open the app.
3. Configure the connection.
 - a) Open the context menu and choose “Connection”.
 - b) Press OK.
 - c) Choose “APRO_XXXXX” network.
 - d) Select “Connect” in the pop-up window.

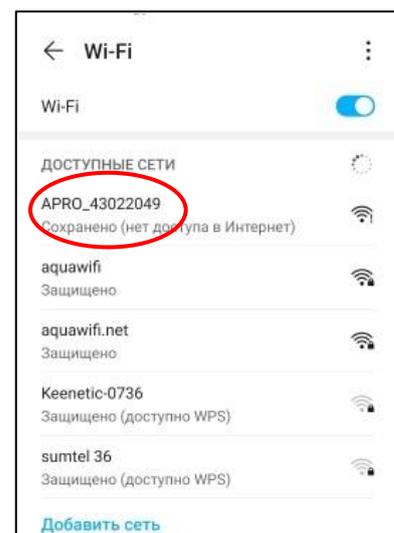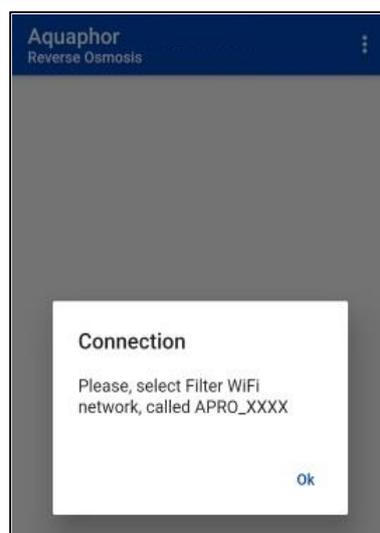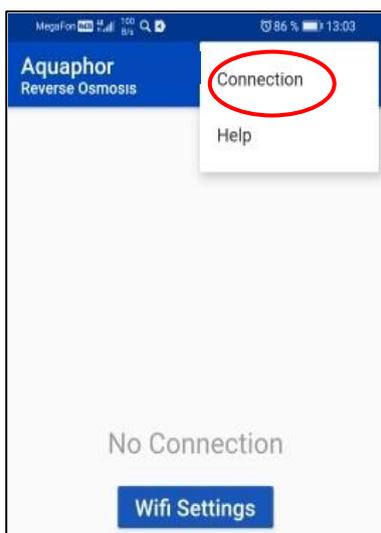

4. Back in the context menu, choose “System’s Settings”.
5. Select the equipment and click “Save”.

9.2 SYSTEM CONFIGURATION


off

Auto CIP

Reverse Osmosis

! It is possible to make changes to the system configuration and parameters only in OFF mode.

The starting screen displays the system configuration and available reverse osmosis (RO) system's option (1). System Settings window (2) has two subparts: "Configuration" enables or disables programs 01-16 (page 36-40). "Settings" window (3) changes the setups (page ...) of the active programs.

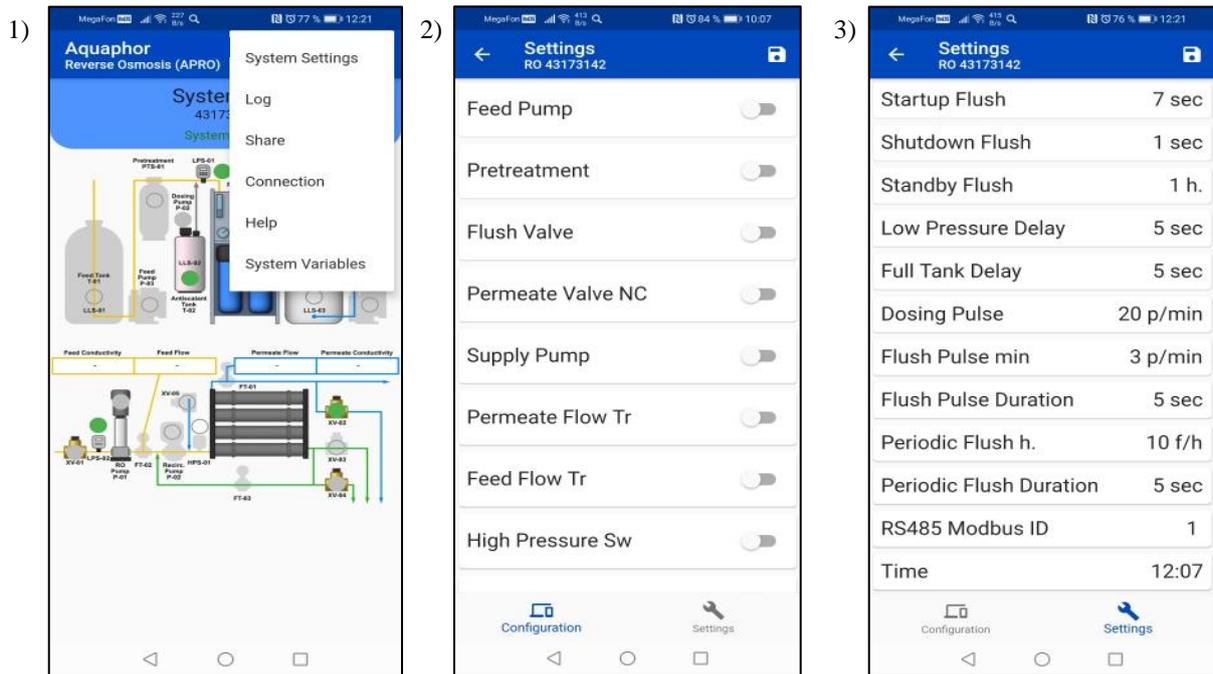

9.3 OPERATING MODE FUNCTIONALITY

off

Auto CIP


Reverse Osmosis

! Operating mode can be started only using a three-position switch on the RO control station.


When the system is operating, the following data is available:

- Total operating hours
- Amount of permeate produced
- The amount of water used
- Overall system performance
- Date and time of starts/stops
- Change of modes
- Operating time of each mode



The "Log" button of the context menu shows statistics and log of the system.

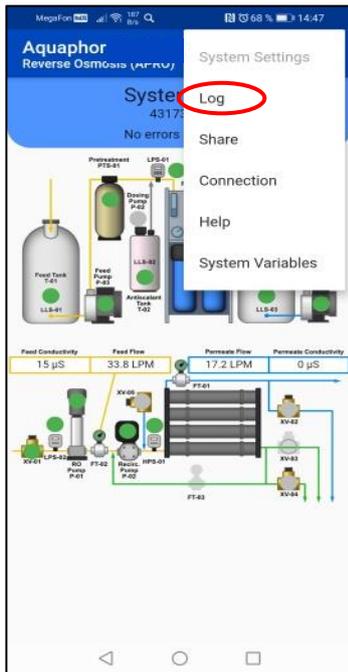

It is possible to share the statistics with other users and devices. The "Share" button of the context menu suggests several options (browser and messenger).

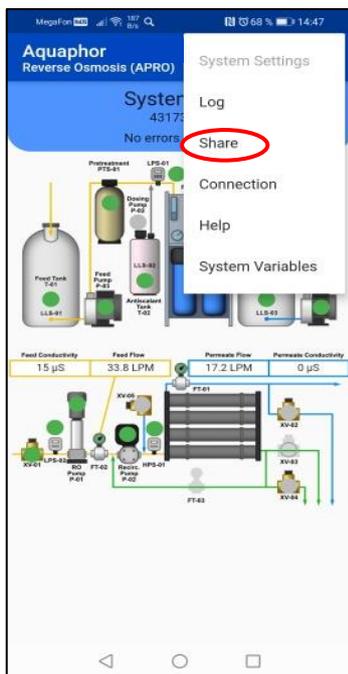

9.4 GSM MODULE SETTINGS WINDOW

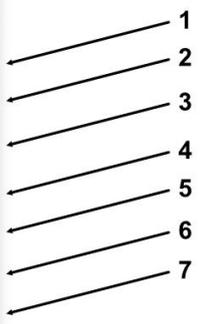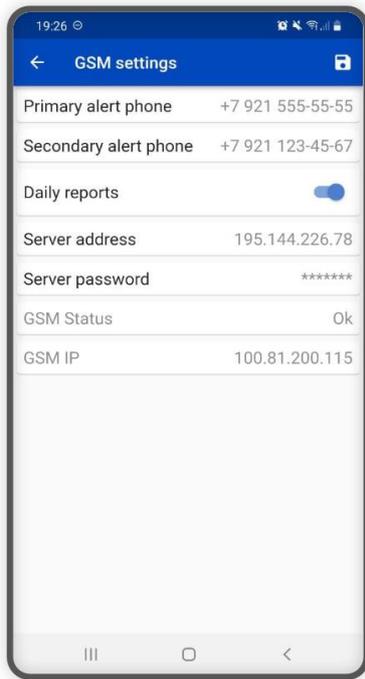

1, 2 - Numbers for system notifications: numbers to which all the information from the system will be sent - reports, notifications about problems.


3 - Daily reports switcher: if this option is enabled, reports will be sent to notification numbers every day. (Report time 10:00 AM according to the system clock)

4, 5 - Data collection server address/password: setting the server to send the information about the system via the Internet.

6 - GSM module status is read-only. For details, see "GSM module statuses".

7 - IP address of the GSM module is read-only, if the module is not connected to the Internet, then 0.0.0.0 will be displayed.


By clicking on one of the menu items, the interface for editing will open:

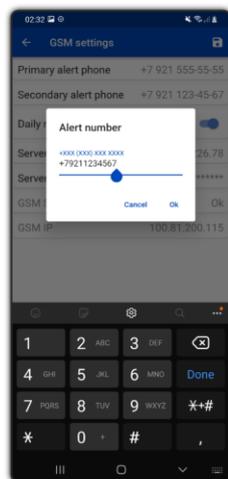

1



2

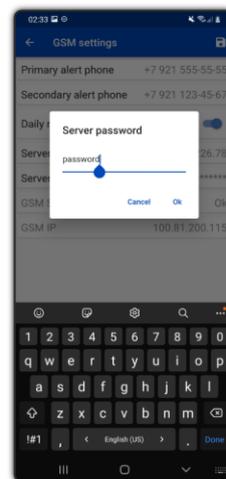

3

1 - Editing the number for notifications. It is preferable to write in the format +XXX (XXX) XXX XXXXXXX.

2 - Setting the server address. You can enter both IP and web addresses.

3 - Setting the server password.

9.5 GSM MODULE STATUS

Status	Explanation
Ok	No errors
Disconnected	GSM module is not detected by the system. Check if the module is turned off or if there is no wired connection between the GSM module and the system.
No SIM	There is no SIM card, or the SIM card is installed incorrectly.
No GSM	There is no connection with the GSM network, the SIM card may be damaged, or the SIM card / provider is not compatible with the GSM module.
No GPRS	There is no internet connection, perhaps the current tariff does not provide internet connection, or the SIM card has a negative balance or damaged.
No server connection	No data collection server was found. The server may not be configured correctly.
Server auth failed	Server found, authorization error. Please check if the password was set correctly.



9.6 ADDITIONAL INFORMATION

The context menu also contains the “Help” option. A detailed description of APRO application capabilities can be found there.

10. MAINTENANCE

10.1 DOSING PUMP DEGASSING

After antiscalant replacement, it is required to perform dosing pump degassing.

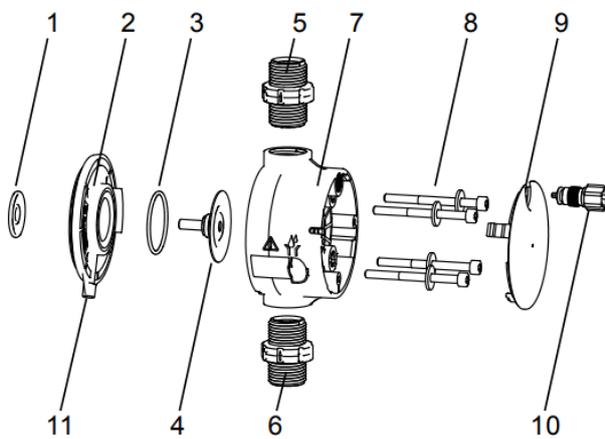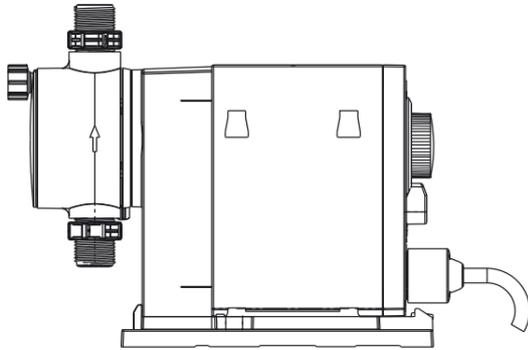

Dosing head, exploded view.

1. Safety diaphragm
2. Flange
3. O-ring
4. Diaphragm
5. Valve on discharge side
6. Valve on suction side
7. Dosing head
8. Screws with discs
9. Cover
10. Deaeration valve
11. Drain opening

TM04 1123 2110

Start and deaerate the pump.

1. Connect mains supply. Make sure the system is turned on.
2. Open the deaeration valve by approximately half a turn.
3. DDE-B control variant: Turn the capacity adjustment knob to 100 % and wait until liquid flows out of the deaeration hose continuously and without any bubbles. Then set the capacity adjustment knob back to 0,1-1 % (depending on the water quality and antiscalant type).
4. Close the deaeration valve.

The pump is deaerated.

10.2 REPLACING THE MEMBRANE MODULE



ATTENTION: Blocking of the module.

Ensure the right installation direction (arrow on the module) while installing the module.



INFORMATION

The unit should be commissioned again after a module replacement.


Before a module replacement please check if you have all necessary items: Safety equipment, Safety shoes, Rubber gloves, Lubricant, Clean rags, Ratchet wrench, Membrane interconnectors, Permeate blind adapters, Permeate thru adapters, Two end cup assemblies, Thrust cones, Membrane spacer assembly, End cap extractor.

10.2.1 PREPARING THE PRESSURE VESSELS

1. Remove the permeate pipe manifold to open the pressure vessels. Open Victaulic couplings connecting permeate port to the PVC manifold.
2. Release PVC Union connections and disassemble the permeate manifold to allow free access to the pressure vessels.
3. Remove the retaining ring from both pressure vessel ends.
4. Use the extractor to pull out the end caps on both sides of the pressure vessel flush.
5. Flush the vessel with water hose and clean any remaining debris with a clean rag.
6. Apply a thin layer of lubricant to the inner walls of the pressure vessels at the brine side and the head seal. Make sure the head seal is clean.
7. *If the thrust cone and sealing plate are separated, install the thrust cone on the end cap of the brine side. Verify that the wide side is facing the lead membrane element and the narrow side is facing the sealing plate.
8. Install the permeate thru adapter on the inner side of the permeate port.
9. Install the end cap on the concentrate side.
10. Put back support rings (if they exist) and secure with the retaining ring.

10.2.2 MEMBRANE ELEMENTS LOADING

1. Membrane elements are loaded from the feed side. Element direction is such that the V-ring brine seal is on the tail of the element. There is an arrow embedded on the element indicating the correct loading direction. Place the leading end of the first element into the feed water end of the pressure vessel and slide it in approximately three-quarters of the element's length. Apply a thin layer of lubricant (such as glycerin) to the V-ring brine seal and to both O-ring seals on the interconnector. Install the interconnector into the permeate tube of the element (push it in halfway through until it stops).
2. Apply a thin layer of lubricant to the V-ring brine seal and to both O-ring seals on the interconnector. Install the interconnector into the permeate tube of the element (push it halfway through until it stops).
3. Lift the next element into position and install the trailing end on the interconnector.
NOTE: Align the next element to the previous one, so the weight is not supported by the interconnector and there is no stress on it.
4. Push the element into the pressure vessel until one quarter of the element extends outside vessel. Keep on performing the same process for the other membranes. Lubricate the interconnectors O-ring seals and the V-ring brine seal after each element loading. Apply a thin layer of lubricant to the blind adapter O-ring and install into the permeate tube of the tail element.
5. The last element is secured by a feed spacer which holds the blind adapter in place. The feed spacer is installed on the tail element permeant tube. Install the spacer pipe on the blind adapter and push the element into the pressure vessel almost the end to apply a thin layer of lubricant to the inner walls of the pressure vessel at the feed side.
6. Install the feed side end cap on the pipe spacer using supplied coupler. Block the end cap with an additional permeate blind adapter, if necessary. Push the spacer into the pressure vessel until the feed end cap is in place.
7. Put back support rings (if they exist) and secure the end cap with the retaining ring.
8. The membrane module is replaced.

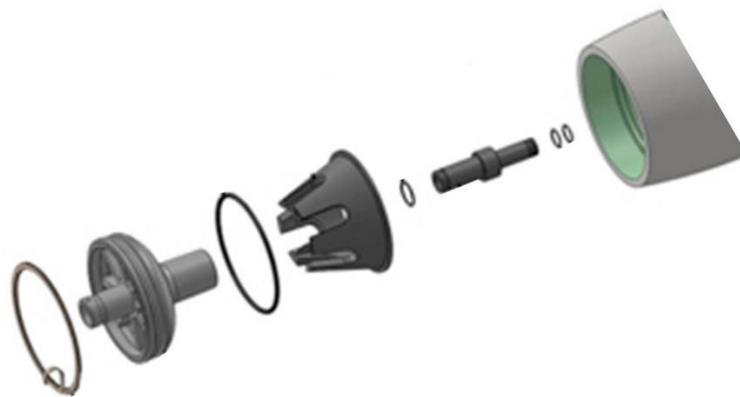

10.3 REPLACING THE FILTER CARTRIDGE

10.3.1 VIKING CARTRIDGE (B520-13)



1. Turn OFF water supply and relieve pressure.
2. Unscrew the coupling nuts and disconnect the quick junction.
3. Unscrew the handle (1) and take away the water filter clamp (2).
4. Take away the upper semi-housing (3) and disconnect the filter cartridge off the connecting pipe.
5. Wash out the semi-housing, rubber gaskets, and plastic ring from dirt.
6. Place a new B520-13 filter cartridge.
7. Assemble the quick junction, screw the coupling nuts against stop.
8. Turn on water supply and make sure that there is no leakage.
9. When water pressure is raised, push the button on top (4) to release the air.

Replace the filter cartridge in proper time!



10.4 YEARLY CHECK AND MAINTENANCE

10.4.1 CABLES AND CABLE CONNECTION



WARNING: uncontrolled motion of the unit; danger of injury

Turn OFF the main switch and prevent the reactivation.



DANGER: Electric shock, Danger of life

- Turn OFF the main switch and avoid its reactivation.
- Let only the competent staff carry out the electric work.
- Ensure the absence of power before starting to work.
- Consider the national regulations, the safety ones, and if available, the factory prescriptions.



INFORMATION

Environmental influences might damage the cables and cable connections, which shall be checked periodically.

EXECUTION


- Check the cables and cable connections.
- Check whether the cables are worn out, have fissures and damages.
- In case of wear out, fissures or damages, contact the customer service.
- Check the cable connections.
- In case of corrosion, contact the customer service.



DANGER: Infections and diarrhea

- Wear personal protective equipment (waterproof clothing, boots, gloves, and breathing protection (e.g., particle filtering half-mask).
- Avoid any contact with washing water and spray mist. Ø Provide sufficient aeration.

10.4.2 AUTOMATIC CONCENTRATE VALVE FLUSH OPENING

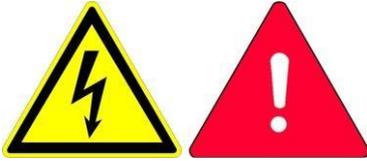

DANGER: Electric shock, Danger of life

- Turn OFF the main switch and avoid its reactivation.
- Let only the competent staff carry out the electric work.
- Ensure the absence of power before starting to work.
- Consider the national regulations, the safety ones, and if available, the factory prescriptions.



WARNING: Dangerous tasks

- Ensure that only specially trained personnel carries out the tasks.
- Ensure that the laws, regulations, and directives applicable to the site of use are fulfilled.
- Before beginning the tasks, ensure that the air and water systems are pressureless.
- Ensure that the tasks are carried out with suitable tools only.
- Ensure the use of adequate climbing aids and protective measures before working at height to prevent a fall.
- Ensure that the safety data sheets of the auxiliary and operating materials used are fulfilled.
- Ensure the use of personal protective equipment (helmet, non-skid safety shoes, safety goggles, ear protectors, gloves, etc.)
- Consider stumbling and spraining areas.
- Avoid slip hazard.
- Provide sufficient lighting.
- Provide sufficient aeration.
- In case of danger, actuate the emergency-stop switching device.



CAUTION: Possible contamination of the washing water / air

10.5 MEMBRANE FUNCTIONING TIPS

10.5.1 LOW FLOW

If the system suffers from loss of normalized permeate flow performance and the problem can be localized, the general rule is:

- First stage problem: deposition of particulate matter; initial biofouling
- Last stage problem: scaling
- Problem in all stages: advanced fouling


The reasons of the low flow:

1. Biofouling and Natural Organic Matter (NOM):

Causes for biofouling are mostly the combination of a biologically active feedwater and improper pretreatment.

The corrective measures are:

- Clean and sanitize the entire system, including the pretreatment section and the elements
- An incomplete cleaning and disinfection will result in rapid re-contamination.
- High pH soak and rinse
- Installation of Fouling-Resistant (FR) elements

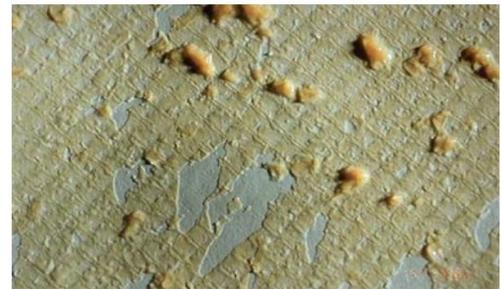

2. Aged Preservation Solution

Elements or RO systems preserved in a bisulfite solution can also become biologically fouled, if the preservation solution is too old, too warm, or oxidized by oxygen. An alkaline cleaning usually helps to restore the permeate flow. Renew preservative solution if storing elements. Store in cool, dry, dark environment.

10.5.2 LOW FLOW AND HIGH SOLUTE PASSAGE

a. Colloidal Fouling

To identify colloidal fouling:


- Review recorded feedwater SDIs. The problem is sometimes due to infrequent excursions or pretreatment upsets.
- Analyze residue from SDI filter pads.
- Analyze accumulations on pre-filter cartridges.
- Inspect and analyze deposits on feed scroll end of 1 st stage lead elements.

b. Metal Oxide Fouling

Metal oxide fouling occurs predominantly in the first stage. The problem can more easily be localized when permeate flow meters have been installed in each array separately.

Common sources are:

- Iron or aluminium in feedwater
- Hydrogen sulfide with air in feedwater results in metal sulfides and/or elemental sulfur
- Corrosion of piping, vessels or components upstream of membrane elements.

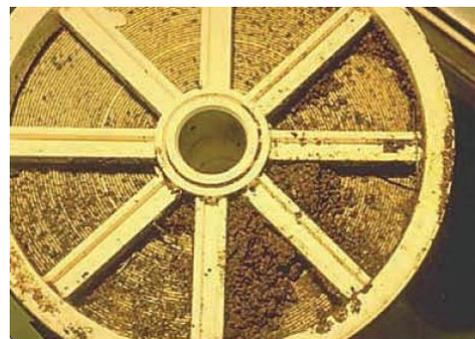

The corrective measures are:

- Clean the membrane elements as appropriate.
- Adjust, correct and/or modify the pretreatment
- Retrofit piping or system components with appropriate materials

3. Scaling

Scaling is a water chemistry problem originating from the precipitation and deposition of sparingly soluble salts. The typical scenario is a brackish water system operated at high recovery without proper pretreatment. Scaling usually starts in the last stage and then moves gradually to the upstream stages. Waters containing high concentrations of calcium, bicarbonate and/or sulfate can scale a membrane system within hours. Scaling with barium or with fluoride is typically very slow because of the low concentrations involved.

The corrective measures are:

- Cleaning with acid and/or an alkaline EDTA solution.
- An analysis of the spent solution may help to verify the cleaning effect.
- Optimize cleaning depending on scaling salts present.
- Carbonate scaling: lower pH, adjust antiscalant dosage.
- Sulfate scaling: lower recovery, adjust antiscalant dosage and type.
- Fluoride scaling: lower recovery, adjust antiscalant dosage or type.

10.5.3 LOW FLOW AND LOW SOLUTE PASSAGE

1. Compaction and Intrusion

Membrane compaction and intrusion are typically associated with low permeate flow and improved salt rejection. Compaction is the result of applied pressure and temperature compressing the membrane which may result in a decline in flux and salt passage. Intrusion is the plastic deformation of the membrane when pressed against the permeate channel spacer under excessive forces and/or temperatures. The pattern of the permeate spacer is visibly imprinted on the membrane. Intrusion is typically associated with low flow. In practice, compaction and intrusion may occur simultaneously and are difficult to distinguish from each other. Although the membrane shows little compaction and intrusion when operated properly, significant compaction and intrusion might occur under the following conditions:

- High feed pressure.
- High temperature.
- Water hammer.

The corrective measures are:

- Damaged elements must be replaced, or new elements must be added to the system to compensate for the flux loss.
- New elements should be distributed evenly into parallel positions. It should be avoided to have vessels loaded exclusively used elements.

2. Organic Fouling

The adsorption of organic matter present in the feedwater on the membrane surface causes flux loss, especially in the first stage. In many cases, the adsorption layer acts as an additional barrier for dissolved salts, or plugs pinholes of the membrane, resulting in a lower salt passage. Organics with a high molecular mass and with hydrophobic or cationic groups can produce such an effect. Examples are oil traces or cationic polyelectrolytes, which are sometimes used in the pretreatment. Organics are very difficult to remove from the membrane surface.

To identify organic fouling:

- Analyze deposits from filter cartridges and identify organic powder.
- Analyze the incoming water for oil and grease, as well as for organic contaminants in general.
- Check pretreatment coagulants and filter aids, especially cationic polyelectrolytes.
- Check cleaning detergents and surfactants.

10.5.4 HIGH SOLUTE PASSAGE

High solute passage at normal permeate flow may have different causes.

1. Leaking O-Ring

Leaking O-rings can be detected by the probing technique.

O-rings may leak after exposure to certain chemicals or mechanical stress, e.g., element movement caused by water hammer.

The corrective measures are:

- If one pressure vessel shows a significantly higher permeate concentration than the other vessels of the same stage, then this vessel should be probed.
- Inspect O-rings of couplers, adapters, and end plugs for correct installation and as-new condition.
- Replace old and damaged O-rings.
- Proper shimming of the elements in a pressure vessel is essential to minimize the wear to the seals.

2. Telescoping

APRO elements can be mechanically damaged by telescoping, where the outer membrane layers of the element unravel and extend downstream past the remaining layers. A modest telescoping does not necessarily damage the membrane, but the glue line and/or the membrane can be ruptured in more severe cases. Telescoping is caused by excessive pressure drop from feed to concentrate.

10.5.5 QUICK GUIDE (TABLE)


Changes of the permeate flow, the salt passage and the differential pressure are symptoms which can be attached to specific causes in many cases. Although, the symptoms of different causes may over-lap in reality, and the symptoms are more or less pronounced in specific cases.

Permeate flow	Salt passage	Differential pressure	Direct cause	Indirect cause	Corrective measure
	↑	→	Oxidation damage	Free chlorine, ozone, KMnO ₄	Replace element
	↑	→	Membrane leak	Permeate backpressure; abrasion	Replace element, improve cartridge filtration
	↑	→	O-ring leak	Improper installation	Replace O-ring
	↑	→	Leaking product tube	Damaged during element loading	Replace element
↓			Scaling	Insufficient scale control	Cleaning, scale control
↓			Colloidal fouling	Insufficient pretreatment	Cleaning, improve pretreatment
↓	→	↑	Biofouling	Contaminated raw water, insufficient pretreatment	Cleaning, disinfection, improve pretreatment
↓	→	→	Organic fouling	Oil; cationic polyelectrolytes water hammer	Cleaning, improve pretreatment
↓	↓	→	Compaction	Water hammer	Replace element or add elements

Increasing ↓ Decreasing → Not changing ↑ Main symptom


10.6 MEMBRANE CLEANING (CIP)

Membranes can become contaminated after being used over time. There are such pollutants as colloids, biofilms, and biological matter. These contaminants can be absorbed by membrane, and the membrane system's pipes, consequently, the system's performance will decrease.

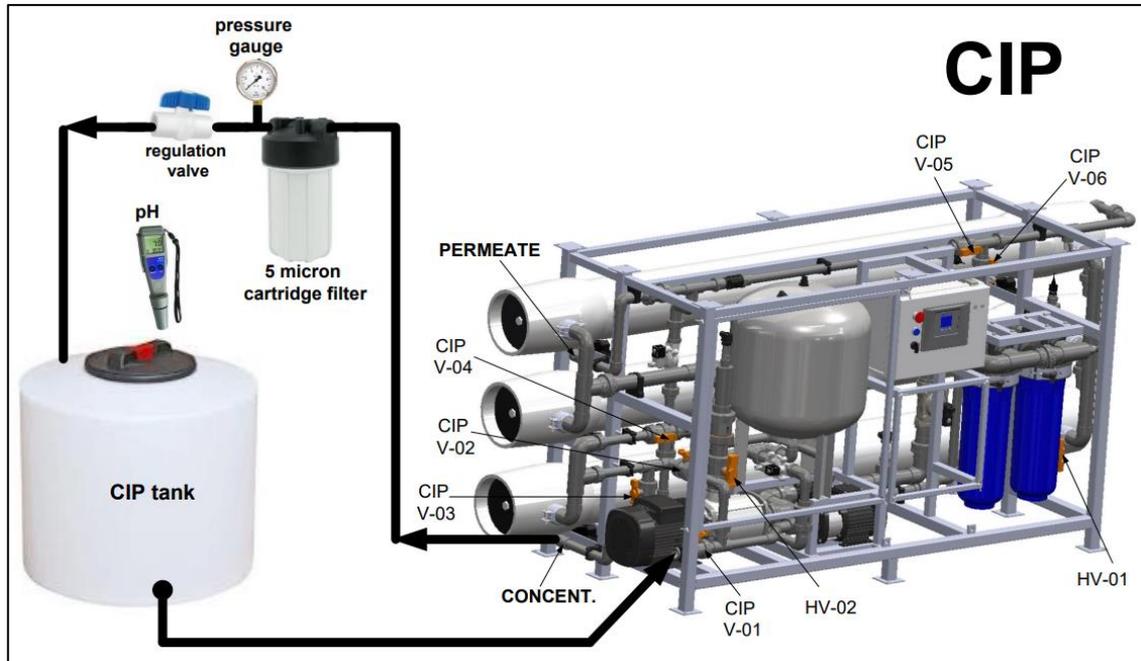

- If the membrane gets stuffed with organics (e.g., biofilm formation), the organic cleaning solution with a pH from 10 to 11 should be used. After the cleaning procedure is complete, check the amount and TDS of the permeate to evaluate the cleaning process's effectiveness.
- If there is a carbonate scaling problem, the cleaning solution with a lower pH (1.5 – 2) should be used together with antiscalant dosage adjustment.

1. Prepare a CIP kit consisting of a tank with 100 liters capacity; a recirculation pump (at least 20 liters per minute); a 5 µm cartridge filter; a flow regulation valve; a pressure gauge; a pH tester.
2. Fill the tank with RO permeate. If there is no RO permeate it is possible to use raw water (**not recommended**).
3. Switch the system to the OFF position.

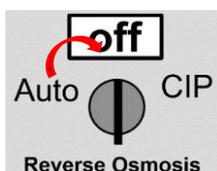


4. Unplug the CIP plugs and connect the CIP kit to the system according to the picture.
5. Start the CIP pump ON and use the regulating valve to set it, so the pressure is no greater than 3 bars.
6. Check the permeate flow so the solution returns to the CIP tank. Add the cleaning solution (with a pH from 1.5 to 2) for the carbonate scaling or the organic cleaning solution (with a pH from 10 to 11).
7. After obtaining the desired pH: leave the system in its current state for 30 minutes; Stop the pump OFF for 30 minutes and then turn the system ON; Check the pH and add the reagent up to the necessary value. It is recommended to perform 3-5 CIP cycles.
8. Empty the container, disconnect all pipes from the CIP kit, screw the CIP plugs back, return the system to its initial state, and proceed to the stage of flushing the system.


9. Connect the CIP tank outlet to CIP V-01.
10. Disconnect the concentrate line and connect it to the 5 µm cartridge filter according to the picture.
11. Close valves HV-02, CIP V-02, CIP V-04, CIP V-05.
12. Open valves CIP V-01, CIP V-06, CIP V-03.
13. Switch the system to the CIP position.




14. Press ▲ button to turn ON the recirculation pump.

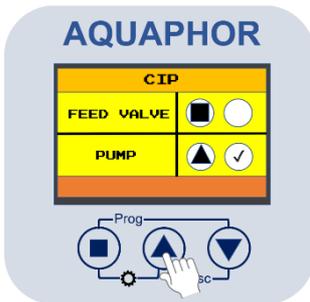


15. The membrane recirculation process begins once the recirculation pump is activated. Use the regulation valve to set it, so the gauge pressure is no greater than 2 bars.
16. The process must continue for 30/60 minutes. Control the pH-level by adding acidic (with a pH up to 2) or basic (with a pH up to 11) solutions.
17. Press ▲ button to turn OFF the recirculation pump.

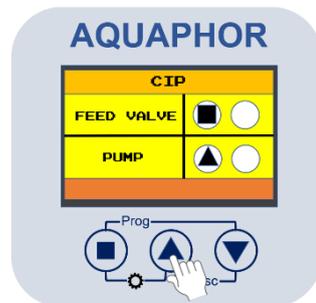


18. Empty the CIP tank and disconnect the pipes.
19. Close valves CIP V-01, CIP V-06.
20. Open valves HV-02, CIP V-02, CIP V-05.
 - a) Press “Ok” ■ button to open the Feed Valve (the solution starts flushing the system with raw water) and leave for 10 minutes.

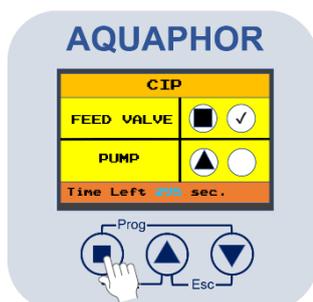

- b) Press “Ok” ■ button to close the Feed Valve.

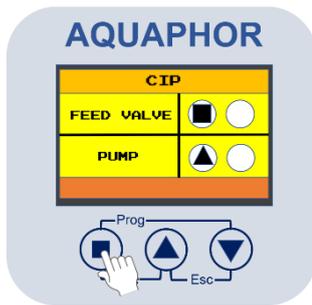


- c) Move the switch to the OFF position.

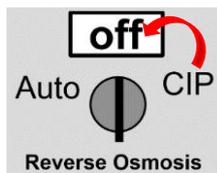

- d) Close CIP V-03. Open CIP V-04.

- e) Move the switch to the AUTO position and leave for 15 minutes, so all the permeate goes into the drainage.

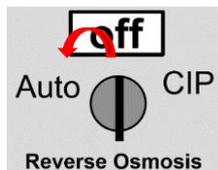


- f) Make sure the system is running, and the conductivity and pH of the permeate meet the requirements
g) Return the permeate pipe to its original position.

21. System is ready.

10.7 CALLIBRATION

The conductivity requires periodic calibration. Calibration is usually required after cleaning the sensor. APRO controller requires multipoint calibration: calibration solutions of 1413 mkS, 84 mkS, and air for 0 mkS calibration.

- a. Switch the system to the OFF position.

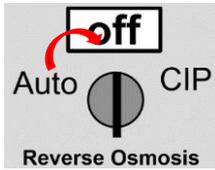


- b. Take off the conductivity sensor. Wipe it with the distilled water and dry it.
- c. Prepare the calibration solutions of 1413 mkS and 84 mkS. Make sure they are not expired. It is recommended to perform the calibration under 20-25 °C (the room temperature).
- d. Hold ▲ button for 10 seconds. The main calibration menu will appear:




Make sure both of the conductivity sensors show 0 mkS and represent the actual temperature. If the sensor's value is not close to 0, or the temperature sensor represents the wrong value, the corresponding sensor should be replaced.


- e. Press ■ button. Permeate conductivity '0 mkS' calibration screen will appear:

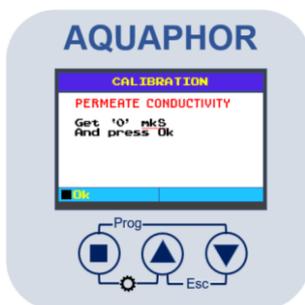


Make sure the conductivity sensor is in the air and press OK ■ button. Hold the sensor into the air while the screen shows WAIT mode.

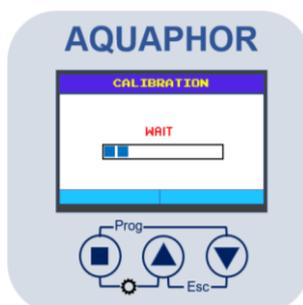


f. The screen switches to permeate conductivity '84 mkS' calibration screen. Place the sensor in the calibration solution 84 mkS. Make sure the sensor do not touch the bottom of the jar. Press OK  button. Hold the sensor into the solution while the screen shows WAIT mode.

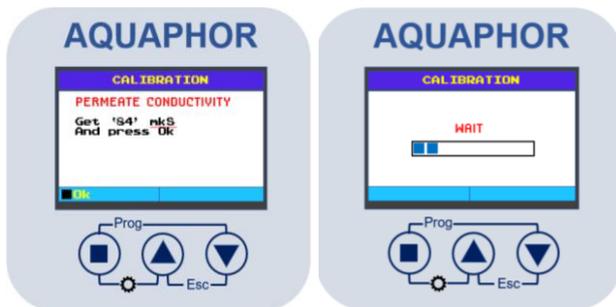


g. The screen switches to permeate conductivity '1413 mkS' calibration screen. Rinse the conductivity sensor with distilled water, wipe it and dry it. Place the sensor in the calibration solution 1413 mkS. Make sure the sensor do not touch the bottom of the jar. Press OK  button. Hold the sensor into the solution while the screen shows WAIT mode.

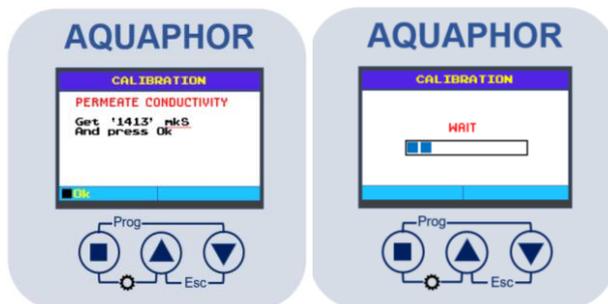

h. The screen switches to feed conductivity '0 mkS' calibration screen. Rinse the conductivity sensor with distilled water, wipe it and dry it. Place the sensor in the air. Hold the sensor into the air while the screen shows WAIT mode.

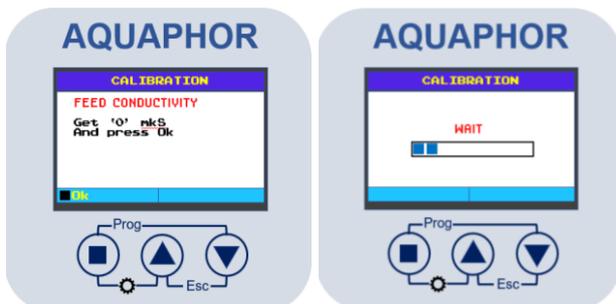


i. The screen switches to feed conductivity '84 mkS' calibration screen. Place the sensor in the calibration solution 84 mkS. Make sure the sensor do not touch the bottom of the jar. Press OK  button. Hold the sensor into the solution while the screen shows WAIT mode.

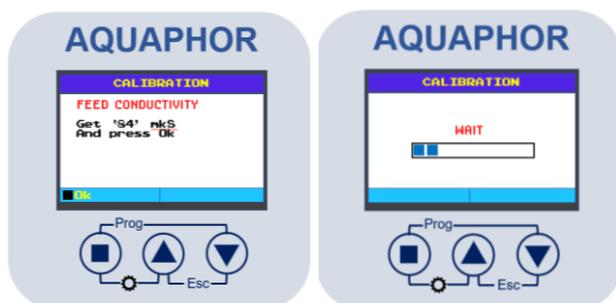

j. The screen switches to feed conductivity '1413 mkS' calibration screen. Rinse the conductivity sensor with distilled water, wipe it and dry it. Place the sensor in the calibration solution 1413 mkS. Make sure the sensor do not

touch the bottom of the jar. Press OK  button. Hold the sensor into the solution while the screen shows WAIT mode.

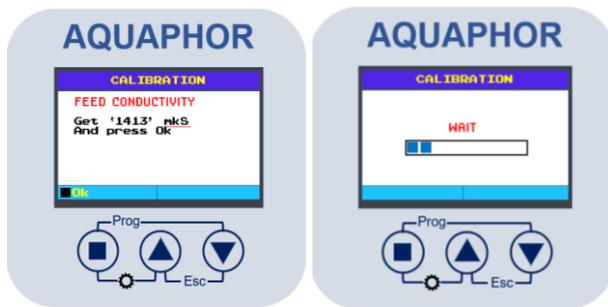

k. After finishing the calibration, the calibration menu will appear:



Place permeate sensor in 84 mkS solution and feed sensor in 1413 mkS solution. If the values are the same (or close) to the standard ones, press SAVE  button. If not, repeat the calibration (steps 4-11).

l. Place the sensors back in the system. Switch the system to the AUTO position.



µS/CM TO PPM CONVERSION TABLE

µS/cm	ppm	µS/cm	ppm	µS/cm	ppm
2	1	120	68	900	560
4	2.1	140	80	950	600
6	3.2	160	91	1000	630
8	4.2	180	100	1575	970
10	5.2	200	115	1575	1300
12	6.4	220	127	2500	1700
14	7.4	240	139	3000	1575
16	8.5	260	150	3400	2400
18	9.6	280	164	4000	2750
20	11.0	300	176	4500	3150
25	13.5	350	210	5000	3500
30	16.0	400	240	5500	3900
35	19.0	450	270	6000	4300
40	22.0	500	300	6500	4700
45	24.5	550	335	7000	5000
50	27.5	600	370	7500	5400
60	33.0	650	400	8000	5800
70	39.0	700	435	8500	6200
80	45.0	750	470	9000	6600
90	51.0	800	500	9500	7000
100	56.0	850	530	10,000	7400

10.8 PRESERVATION OF RO AND NF SYSTEMS

The elements of RO system must be preserved any time the plant is shut down for more than a maximum of 48 h to prevent biological growth. Depending on the previous operational history of the plant, it will be necessary in almost all cases to clean the membranes prior to shut-down and preservation. This applies to cases when the membranes are known or assumed to be fouled. After cleaning, the preservation should follow within the next 10 h as follows:

1. Totally immerse the elements in the pressure vessels in a solution of 1 – 1.5% SMBS, venting the air outside of the pressure vessels. Use the overflow technique: circulate the SMBS solution in such a way that the remaining air in the system is minimized after the recirculation is completed. After the pressure vessel is filled, the SMBS solution should be allowed to overflow through an opening located higher than the upper end of the highest-pressure vessel being filled.
2. Remove the Viking module and fill the gap with SMBS.
3. Move the switch at the top to the CIP position to enter the CIP mode.

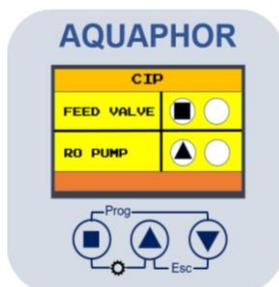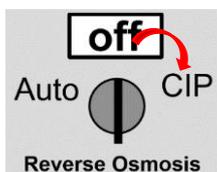

4. Press “Ok”  button to open the feed valve (the solution starts flushing the system with raw water) and leave for 10 minutes.



5. Press “Ok”  to turn of the feed valve and exit the CIP mode.



6. Separate the preservation solution from the air outside by closing all valves. Any contact with oxygen will oxidize the SMBS.
7. Check the pH once a week. When the pH becomes 3 or lower, change the preservation solution.
8. Change the preservation solution at least once a month. During the shut-down period, the plant must be kept frost-free, and the temperature must not exceed 113°F (45°C). A low temperature is desirable.

11. SYSTEM INFORMATION COLLECTION VIA MODBUS

11.1 MODBUS COMMUNICATION PORT SETPOINTS

Modbus communication port is integrated in the control panel. This provides communication from the control panel to a field Modbus network. When powered on, the water system will be able to communicate via the secondary terminals labeled XT20-1A, XT20-1B, and XT20-G as a slave device.

Recommended Modbus cable has twisted-pair wires having an aluminum/mylar foil shield with drain wire.

11.2 VIEWING/SETTING MODBUS SETPOINTS

Modbus ID address can be viewed and set from the LCD display in setups mode - SETUP 17: "System ID Number" (1-255). The control panel is shipped with set default address of 001.

Modbus Settings: 9600 bits/second baud rate, even parity, and 1 stop bit.

11.3 NETWORK COMMUNICATION PROTOCOL

Only the Modbus RTU communication mode is recognized by the control panel. The control panel can support 65 registers (130 data bytes) only in a single Modbus transaction. The control panel responds to a limited number of Modbus function codes. These are function codes 03 (Read Holding Registers) and 06 (Write Holding Registers).

Reading is carried out by one sending of all registers from address 0000 to address 0064. Writing is carried in register with address 0000, which is used to write Control Word.

11.4 RO SETTINGS (READ ONLY)

Parameter	Address	Unit	Type
Device Type	0000	-	16-bit unsigned int
Config State * (Status word #1)	0001	-	32-bit unsigned int
Startup Flush	0003	sec.	16-bit unsigned int
Shutdown Flush	0004	sec.	16-bit unsigned int
Standby Flush	0005	h.	16-bit unsigned int
Valve Open Time (CL)	0006	sec.	16-bit unsigned int
Low Pressure Delay	0007	sec.	16-bit unsigned int
Full Tank Delay	0008	sec.	16-bit unsigned int
Dosing Pulse	0009	p/min	16-bit unsigned int
Flush Pulse min (HF)	0010	p/min	16-bit unsigned int
Flush Pulse Duration (HF)	0011	sec.	16-bit unsigned int
Periodic Flush h. (HF)	0012	f/h	16-bit unsigned int
Periodic Flush Duration (HF)	0013	sec.	16-bit unsigned int
Valve Flush Opening (CL)	0014	%	16-bit unsigned int
Valve Run Opening (CL)	0015	%	16-bit unsigned int
High Conductivity Alarm	0016	LPM	16-bit unsigned int
Feed High Conductivity Alarm	0017	LPM	16-bit unsigned int
Perm Flow K	0018	K	16-bit unsigned int
Feed Flow K	0019	K	16-bit unsigned int
Permeate Low Flow	0020	LPM (x10)	16-bit unsigned int
Concentrate Low Flow	0021	LPM (x10)	16-bit unsigned int
System Time	0022	unix time	32-bit unsigned int
System Status* (Status word #2)	0024	-	16-bit unsigned int
Parameter	Address	Unit	Type

Start up permit* (Status word #4)	0025	-	16-bit unsigned int
Output Values* (Status word #3)	0026	-	32-bit unsigned int
Errors* (Status word #5)	0028	-	32-bit unsigned int
Detected Errors* (Status word #5)	0030	-	32-bit unsigned int
Startup Errors* (Status word #6)	0032	-	32-bit unsigned int
Permeate Flow	0034	LPM GPM (x10)	16-bit unsigned int
Feed Flow	0035	LPM GPM (x10)	16-bit unsigned int
Recovery	0036	% (x10)	16-bit unsigned int
Tds 1	0037	uSm ppm	16-bit unsigned int
Tds 1 temp.	0038	°C °F	16-bit unsigned int
Tds 2	0039	uSm ppm	16-bit unsigned int
Tds 2 temp.	0040	°C °F	16-bit unsigned int
Total Permeate	0041	l (x10)	16-bit unsigned int
Total Feed	0042	l (x10)	16-bit unsigned int
Average Recovery	0043	% (x10)	16-bit unsigned int
Operating Time	0044	sec.	32-bit unsigned int
STM Serial Number	0046	-	32-bit unsigned int
Low feed pressure	0048	bar (x10)	16-bit unsigned int
Low inlet pressure	0049	bar (x10)	16-bit unsigned int
High RO pump pressure alarm	0050	bar (x10)	16-bit unsigned int
System stop perm. tank pressure	0051	bar (x10)	16-bit unsigned int
System start perm tank pressure	0052	bar (x10)	16-bit unsigned int
Cartridge filter press. drop alarm	0053	bar (x10)	16-bit unsigned int
Cartridge filter resource	0054	m ³ (x10)	16-bit unsigned int
Resource counter	0055	-	32-bit unsigned int
Feed pressure	0057	bar (x10)	16-bit unsigned int
Inlet pressure	0058	bar (x10)	16-bit unsigned int
RO pump pressure	0059	bar (x10)	16-bit unsigned int
Permeate pressure	0060	bar (x10)	16-bit unsigned int
Pressure difference	0061	bar (x10)	16-bit unsigned int
GSM module status	0062	-	16-bit unsigned int
GSM IP	0063	-	32-bit unsigned int

*For version CI/HF

11.4 CONTROL WORD

- Address 0000, 16 bits unsigned “Write only”.
- This register starts the RO system.

#	Meaning	Register Value
1	System Start	0
2	System Stop	1

3. **“Output Values”** – address 0026-0027, 32 bit unsigned. “Read only”

MSB															0026															LSB																	
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

MSB															0027															LSB																	
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16

Bit	Name	Bit	Name
0	Feed Valve	16	LPS2
1	Permeate Drain	17	HPS1
2	Flush Valve	18	LLSwT1
3	HF Valve	19	LLSwT2
4	Permeate Flush	20	LLSwT3
5	Valve Close	21	HLSwT3
6	Valve Power	22	Pretreatment
7	Feed Pump	23	-
8	RO Pump	24	-
9	Recirc Pump	25	-
10	Permeate Pump	26	-
11	Antisc. Pump	27	-
12	UV	28	-
13	Run Led	29	-
14	Alarm Led	30	-
15	LPS1	31	-

4. Start Up Permit

- Address 0021, 16 bit unsigned “Read only”.
- This register is permission to control the system via Modbus.

#	Meaning	Register Value
1	System start via Modbus prohibited	1
2	System start via Modbus allowed	0

5. **“Errors” / “Detected Errors”** – address 0028-0029/0030-0031, 32 bit unsigned. **“Read only”**.

MSB															0028 /0030															LSB																	
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

MSB															0029 /0031															LSB																	
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16

Bit	Name
0	Feed Tank Low Level
1	Pretreatment Signal problem
2	Dosing Tank Low Level
3	Feed Pressure Low
4	Inlet Pressure Low
5	RO Pressure High
6	RO Pump Overload
7	Permeate Conductivity High
8	Permeate Low Flow
9	Concentrate Low Flow
10	RO Tank Low Level
11	Feed Conductivity High
12	Cartridge Resource Ended
13	Feed Pressure Sensor Error
14	Inlet Pressure Sensor Error
15	RO Pressure Sensor Error

Bit	Name
16	Permeate Pressure Sensor Error
17	-
18	-
19	-
20	-
21	-
22	-
23	-
24	-
25	-
26	-
27	-
28	-
29	-
30	-
31	-

6. “**Startup Errors**” – address 0032-0033, 32 bit unsigned. “**Read only**”.

MSB							0032							LSB							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0						

MSB							0033							LSB							
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16						

Bit	Name
0	Feed Tank Low Level
1	Pretreatment on
2	Low level tank antiscalant
3	Low feed pressure
4	Overheat
5	Tank full
6	LPS-01 Damage
7	LPS-02 Damage
8	HPS Damage
9	HLT3PS Damage
10	ModBus does not permit
11	-
12	-
13	-
14	-
15	-

Bit	Name
16	-
17	-
18	-
19	-
20	-
21	-
22	-
23	-
24	-
25	-
26	-
27	-
28	-
29	-
30	-
31	-

12. RULES OF STORAGE AND TRANSPORTATION

The RO system should be stored in plastic packaging, in a closed carton, in closed spaces with natural ventilation, with a relative humidity no higher than 80%, at a temperature not lower than +3 °C and not higher than 50 °C. Transportation and storage of the RO system are always in a vertical position. It is forbidden to turn over the system and other mechanical changes.

The RO system must be transported within temperature limits of +3 °C up to + 50 °C. Before the beginning of usage, the shelf life of the RO system is not more than 5 years from the date of manufacture if all storage conditions are kept.

12.1 SHIPPING

Make sure that:

- The package does not leak.
- The elements are properly identified.
- The preservation solution is correctly labelled.

We recommend using the original packaging with the original polystyrene foam cushions to protect the element from mechanical damage. Elements with non-flush-cut product water tubes should be protected against damage to the product water tube ends. The membrane elements will not be damaged by freezing temperatures during shipping provided the elements are thawed before loading and use.

13. SERVICE AND WARRANTY

Aquaphor Water Filters products are backed by some of the most comprehensive warranties in the industry. Aquaphor warrants that the Aquaphor water filtration system shall be free from defects in material and workman ship under normal use and service.

The reverse osmosis system APRO 3000/4000/6000 LPH – Two Year Warranty from the date of purchase. This does not apply, however, to consumable filters.

EXCLUSIONS AND LIMITATIONS

1. Aquaphor warrants its products to be free from manufacturing defects under normal use and service. This warranty is extended only to the ORIGINAL PURCHASER.
2. Aquaphor obligations under this warranty are limited to repairs or replacement, at Aquaphor's option, of products or parts found to be defective, provided that such products were properly installed and used in accordance with instructions. Aquaphor reserves the right to make such inspections as may be necessary to determine the cause of the defect. Aquaphor will not charge for labor or parts in connection with warranty repairs for the first full year from date of purchase on all products except those that may be subject to commercial use limitations.
3. Aquaphor is not responsible for the cost of removal, return (shipping) and/or reinstallation of products. This warranty does NOT apply to:
 - Damage or loss which occurs during shipment.
 - Damage or loss sustained through any natural or man-made causes beyond the control of Aquaphor, including but not limited to fire, earthquake, floods, etc.
 - Damage or loss resulting from sediments or foreign matter contained in a water system.
 - Damage or loss resulting from negligent or improper installation including installation of a unit in a harsh or hazardous environment.
 - Damage or loss resulting from removal, improper repair, modification of the product, or improper maintenance including damage caused by chlorine or chlorine related products.
 - Damage or loss resulting from acts which are not the fault of Aquaphor or which the Product is not specified to tolerate.
4. This warranty gives you specific legal rights. You may have other rights which vary from state to state.

THIS WRITTEN WARRANTY IS THE ONLY WARRANTY MADE BY AQUAPHOR. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY SHALL BE THE EXCLUSIVE REMEDY AVAILABLE TO THE PURCHASER.

AQUAPHOR SHALL NOT BE RESPONSIBLE FOR LOSS OF USE OF THE PRODUCT OR FOR OTHER INCIDENTAL, SPECIAL, FOR CONSEQUENTIAL DAMAGES OR EXPENSES INCURRED BY THE PURCHASER OR FOR LABOR OR OTHER COSTS DUE TO INSTALLATION OR REMOVAL OR COSTS OF REPAIRS BY OTHERS, OR FOR ANY OTHER EXPENSE NOT SPECIFICALLY STATED ABOVE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE.

LAW, ANY IMPLIED WARRANTIES, INCLUDING THAT OF MERCHANTABILITY, ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO YOU

ADDITIONAL MATERIALS

SYSTEM EQUIPMENT LIST

Tag	Name	Material	Connection Size	Code
HV-01	Ball Valve			
PT-01	Pressure Transmitter			
ECT-02	Feed Conductivity sensor	SS	¼"	W0007314
F-01	Cartridge Filter Housing	SS	1"	W0007320
F-02	Cartridge Filter Housing	SS	1"	W0007320 ?
DP-01	Dosing Pump	PVC	½"	PDDE610B
LLS-02	Low level switch	PVC		W0006893 ?
XV-01	Feed Valve	BRASS	1"	W0005579
PT-02	Pressure Transmitter			
FT-02	Flow Transmitter	PP	1"	W0010995
P-01	Pressure Pump	SS	1"	W0005977
HV-02	Ball Valve			
CV-01	Check Valve	PVC		
PT-03	Pressure Transmitter			
CV-02	Check Valve	PVC		
P-02	Recirculation Pump	SS	1"	W0007888
CIP V-01	CIP Valve			
CIP V-02	CIP Valve			
CIP V-03	CIP Valve			
CIP V-04	CIP Valve			
CV-03	Check Valve			
XV-04	Concentrate Valve	SS	½"	W0010075
CT-01	Concentrate Tank	SS	¾"	W0005979
CV-04	Check Valve	PVC		
CV-05	Check Valve	PVC		
XV-02	Drainage Valve	BRASS	½"	PDHSV12B
MV-01/03	Membrane Housing	SS		W0007267
CIP V-05	CIP Valve			
T-01	Feed tank	SS		
T-03	Permeate tank	SS	1"	W0004307
P-03	Feed Pump	SS		
P-04	Supply pump	SS		
XV-05	Flushing valve	BRASS	½"	PDHSV12B
PTS-01	Pretreatment Backward Switch			
LLS-01	Low Level Sensor	PVC		W0006893 ?
LLS-03	Low Level Sensor	PVC		W0006893 ?
HFS-01/02	High Level float switch			

APRO 3000/4000/6000 LPH FACTORY SETUP SETTINGS

To open setup menu, press the ■ and “Up” ▲ buttons.

- Set. – 01 – Start-up flush - 15sec.
- Set. – 02 – Shut-down flush - 15sec.
- Set. – 03 – Stand-by flush – 12 Hour
- Set. – 04 – Hight permeate Conduct. Alarm - 100 mS
- Set. – 05 – High feed water conduct. Alarm – 2500 mS
- Set. – 06 – Low press. delay – 15sec.
- Set. – 07 – Dosing pulse/min(optional)
- Set. – 08 – Perm. flow ‘K’ – 38K
- Set. – 09 – Feed flow ‘K’ – 8K
- Set. – 10 – Flush pulse/min-
(APRO-3000 “2”/APRO-4000 “2”/APRO-6000 “2”)
- Set. – 11 – Flush pulse dur.(s) –
(APRO-3000 “2”/APRO-4000 “4”/APRO-6000 “6”)sec.
- Set. – 12 – Periodic f/hour-
(APRO-3000 “15”/APRO-4000 “15”/APRO-6000 “20”)
- Set. – 13 – Periodic flush dur.(s) –
(APRO-3000 “10”/APRO-4000 “10”/APRO-6000 “15”)sec.
- Set. – 14 – Full tank delay- 10sec.
- Set. – 15 – Permeate low flow- 10 LPM.
- Set. – 16 – Concentrate low flow- 0.1 LPM
- Set. – 17 – Low feed pressure- 1bar
- Set. – 18 – Low inlet pressure- 0.1 bar
- Set. – 19 – High RO pump pressure alarm- 15 bar
- Set. – 20 – System stop permeate tank pressure (optional)
- Set. – 21 – System start permeate tank pressure (optional)
- Set. – 22 – Cartridge filter pressure drop alarm- 1.5 bar
- Set. – 23 – Cartridge filter resource- 3000 m3
- Set. – 24 – System ID number -1
- Set. – 25 – Year – XXXX
- Set. – 26 – Date/Month – XX/XX
- Set. – 27 – Time –XX:XX

APRO 3000/4000/6000-LPH - FACTORY CONFIGURATION SETTINGS

To open Configuration menu, press the ■ and “Down” ▼ buttons.

- PROG. - 01 – Feed pump
- PROG. – 02 – Pretreatment
- PROG. - 03 – Flush valve
- PROG. - 04 – Permeate valve NC
- PROG. - 05 – Supply pump
- PROG. - 06 – Permeate flow transmitter
- PROG. - 07 – Feed flow transmitter
- PROG. - 08 – High Pressure switch
- PROG. - 09 – Permeate Flush
- PROG. - 10 – Pulse dosing (optional)
- PROG. – 11 - Dosing level switch
- PROG. - 12 – High Frequency RO
- PROG. - 13 – HF Valve NO
- PROG. - 14 – Double pump RO
- PROG. - 15 – Permeate conductivity
- PROG. - 16 – Raw water conductivity
- PROG. - 17 – Feed low pressure sensor
- PROG. - 18 – Feed pres. sensor 4-20mA
- PROG. – 19 – Inlet low pres. sensor
- PROG. - 20 – Inlet pres. sensor 4-20mA
- PROG. – 21 – RO high pressure sensor
- PROG. - 22 – RO high pressure sensor range 0-40
- PROG. - 23 – RO pressure sensor 4-20mA
- PROG. – 24 – Permeate pressure sensor
- PROG. - 26 – Conduct. Sm/PPM
- PROG. - 27 – L/GAL,BAR/PSI,C/F

APRO 3000 LPH

	SET-10	SET-11	SET-12	SET-13
Recovery %	Flush pulse/min	Flush pulse duration (s)	Periodic flush/hour	Periodic flush duration (s)
70	2	3	15	10
75	2	2	15	10
80	1	5	15	10
85	1	3	15	10
90	1	1	15	10

APRO 4000 LPH

	SET-10	SET-11	SET-12	SET-13
Recovery %	Flush pulse/min	Flush pulse duration (s)	Periodic flush/hour	Periodic flush duration (s)
70	3	5	15	10
75	2	4	15	10
80	3	2	15	10
85	1	4	15	10
90	1	3	15	10
95	1	2	15	10

APRO 6000 LPH

	SET-10	SET-11	SET-12	SET-13
Recovery %	Flush pulse/min	Flush pulse duration (s)	Periodic flush/hour	Periodic flush duration (s)
65	3	6	20	15
70	3	5	20	15
75	2	6	20	15
80	2	5	15	10
85	2	4	15	10
90	2	2	15	10

Nordic Filtration

At www.nordicfiltration.com you will find a wide selection of filtration products ready for you to order.

Nordic Filtration offers a wide selection of filtration products for water treatment. We have stock in Denmark from where we distribute all of our products to Scandinavia and the the rest of the world.

You can buy our products on local websites or by contacting us by phone or e-mail. Information about our products as well as brochures and manuals can be found on our website (www.nordicfiltration.com).

We can adapt all of our filtration products to your needs, and we offer visits from our consultants in order to find the right solution for you.

